

236R

Spare parts

Ersatzteile

 
Pièces détachées

Reserve onderdelen

Repuestos



Reservdelar

A 236R
GEAR

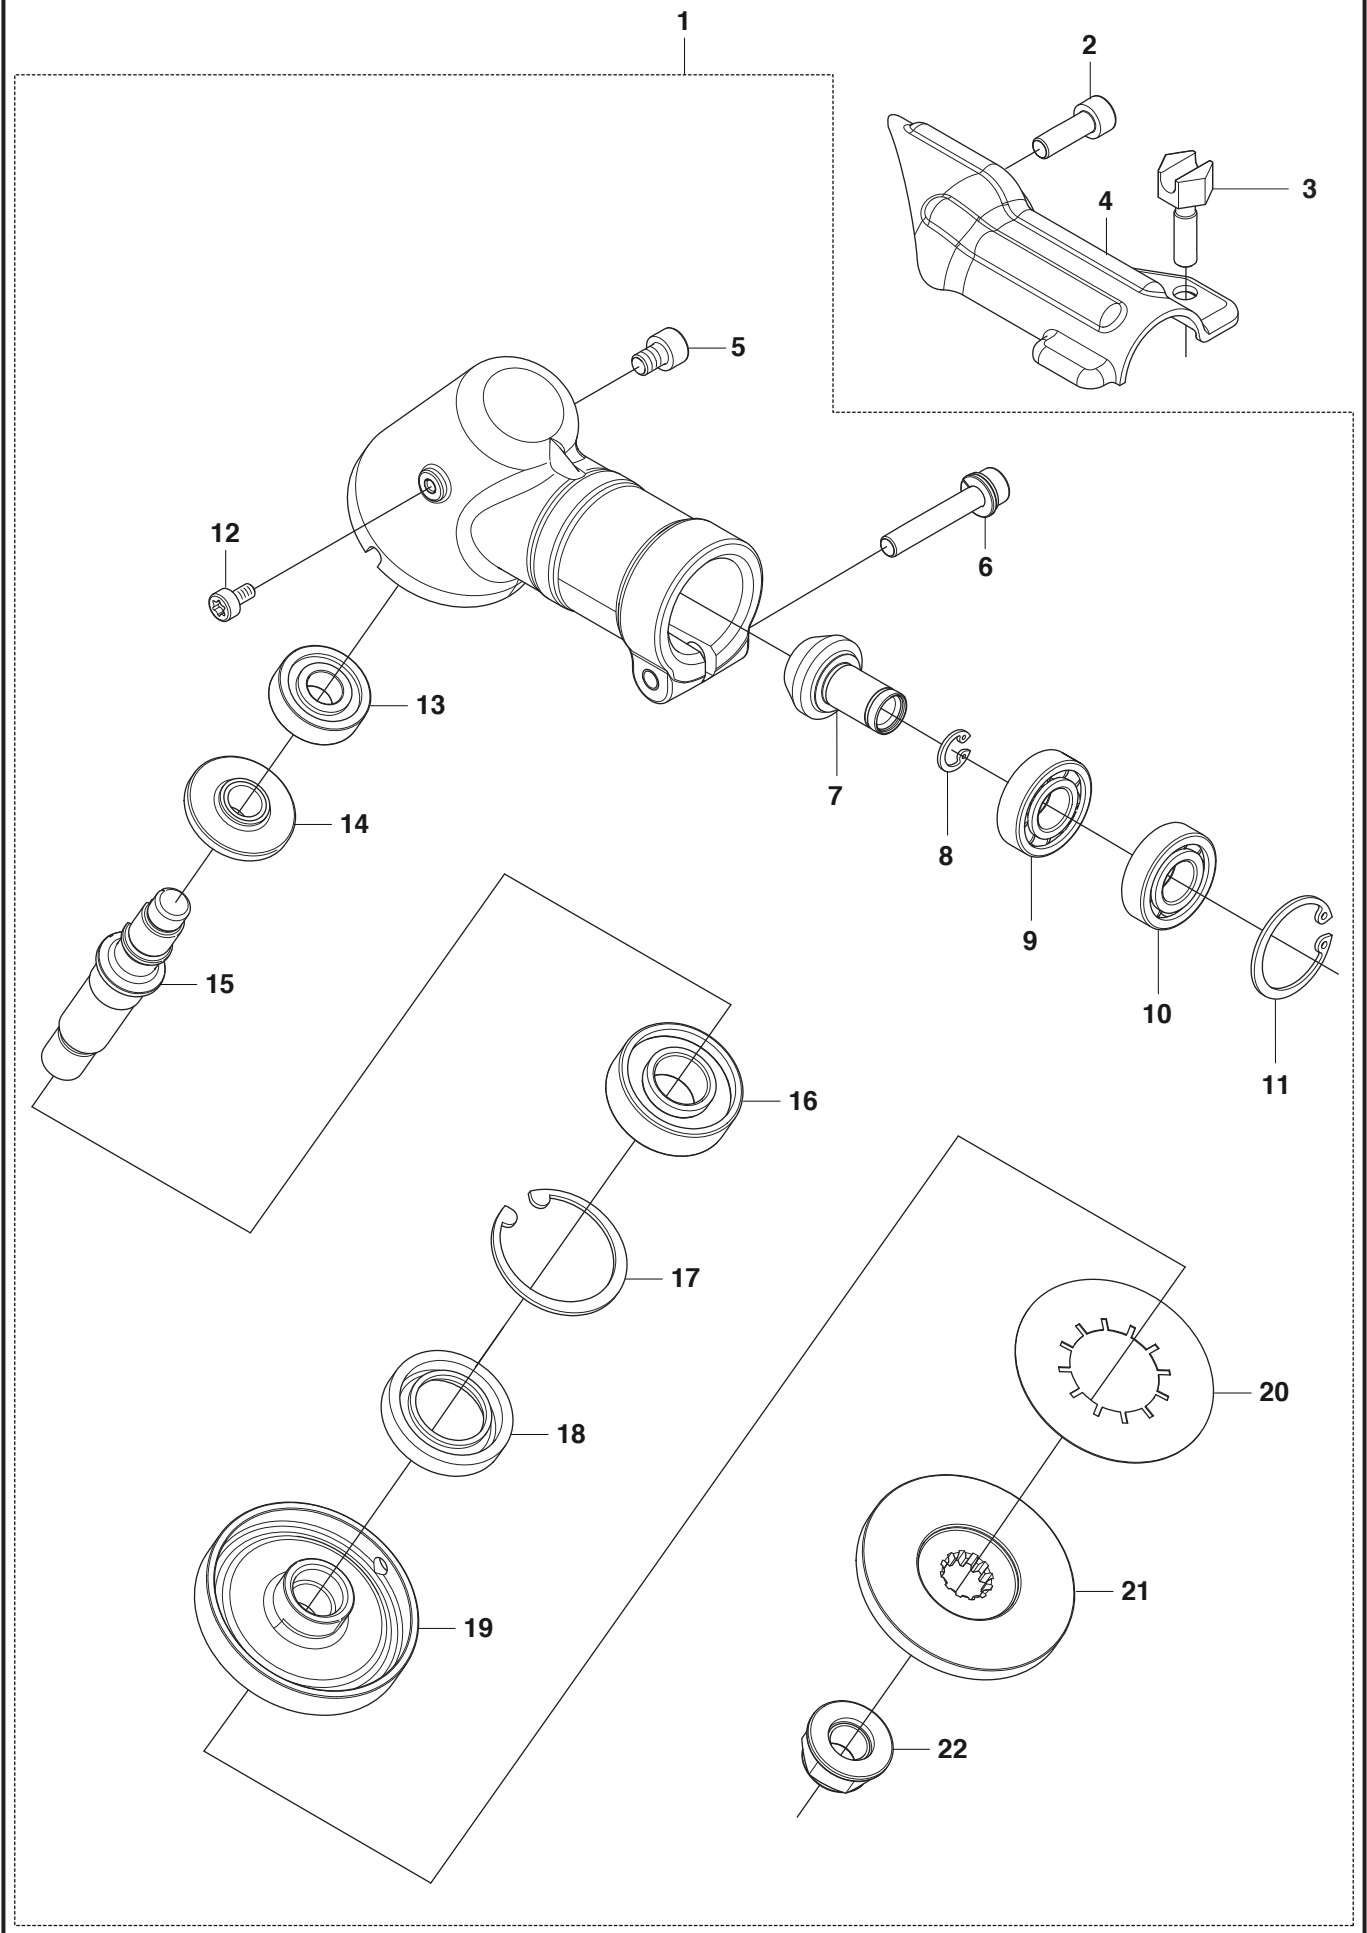

Position	Article	Quantity	Notes	Kit
1	579 07 62-01			
2	506 74 56-01	1		
3	537 18 95-01	1		
4	528 81 85-01	1		
5	521 86 20-01	1		1
6	521 86 24-01	1		1
7	579 07 68-01	1		1
8	516 12 41-01	1		1
9	516 12 79-01	1		1
10	516 13 00-01	1		1
11	506 60 99-01	1		1
12	544 36 27-01	1		1
13	505 17 02-01	1		1
14	579 07 67-01	1		1
15	579 07 66-01	1		1
16	516 13 17-01	1		1
17	502 84 93-01	1		1
18	521 52 22-01	1		1
19	579 07 69-01	1		1
20	579 07 70-01	1		1
21	579 07 71-01	1		1
22	579 07 64-01	1		1

  B 236R
TUBE & SHAFT

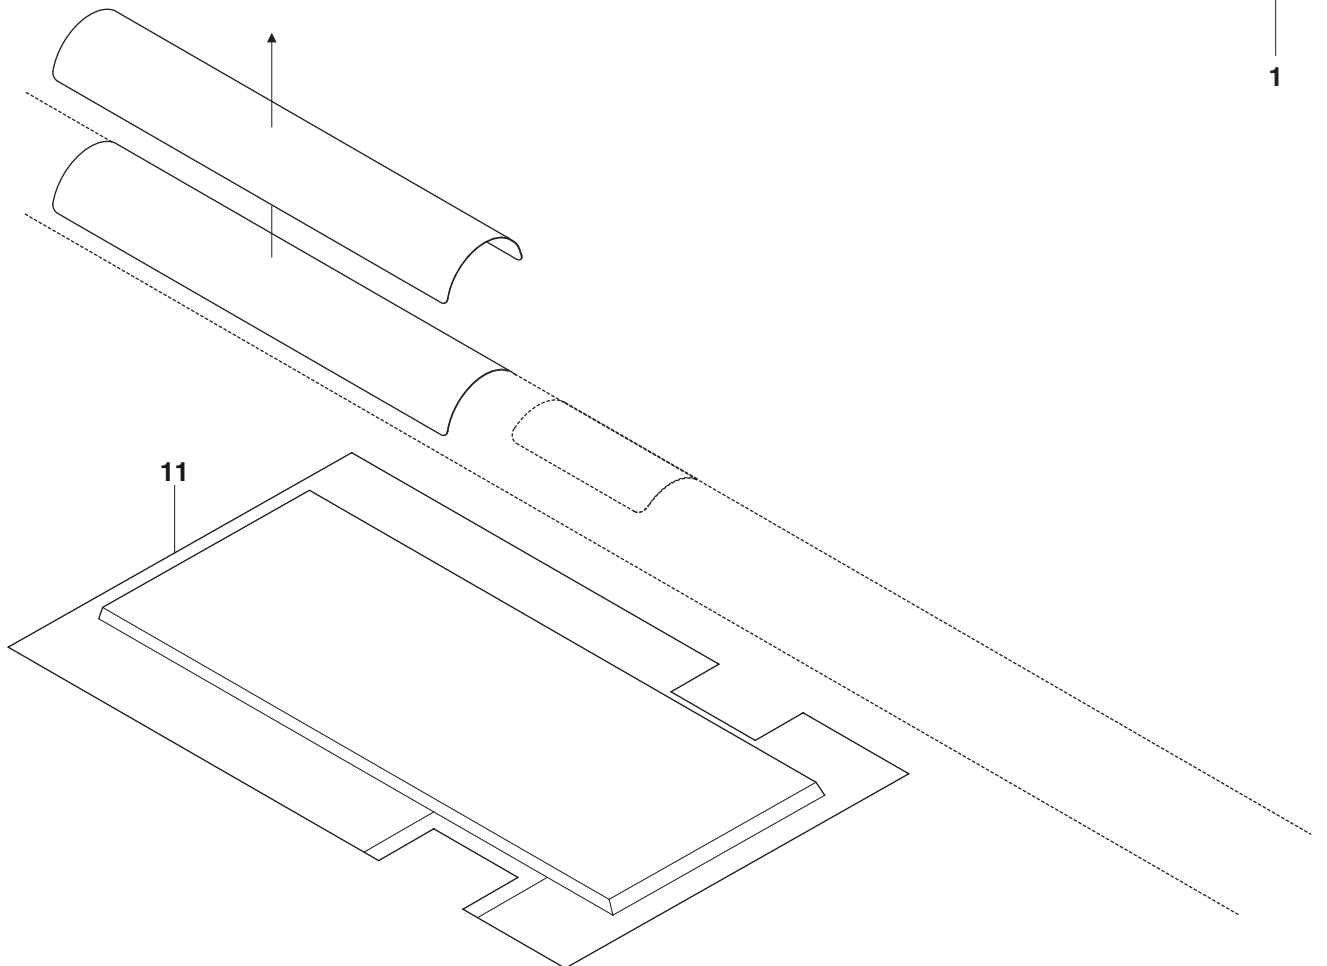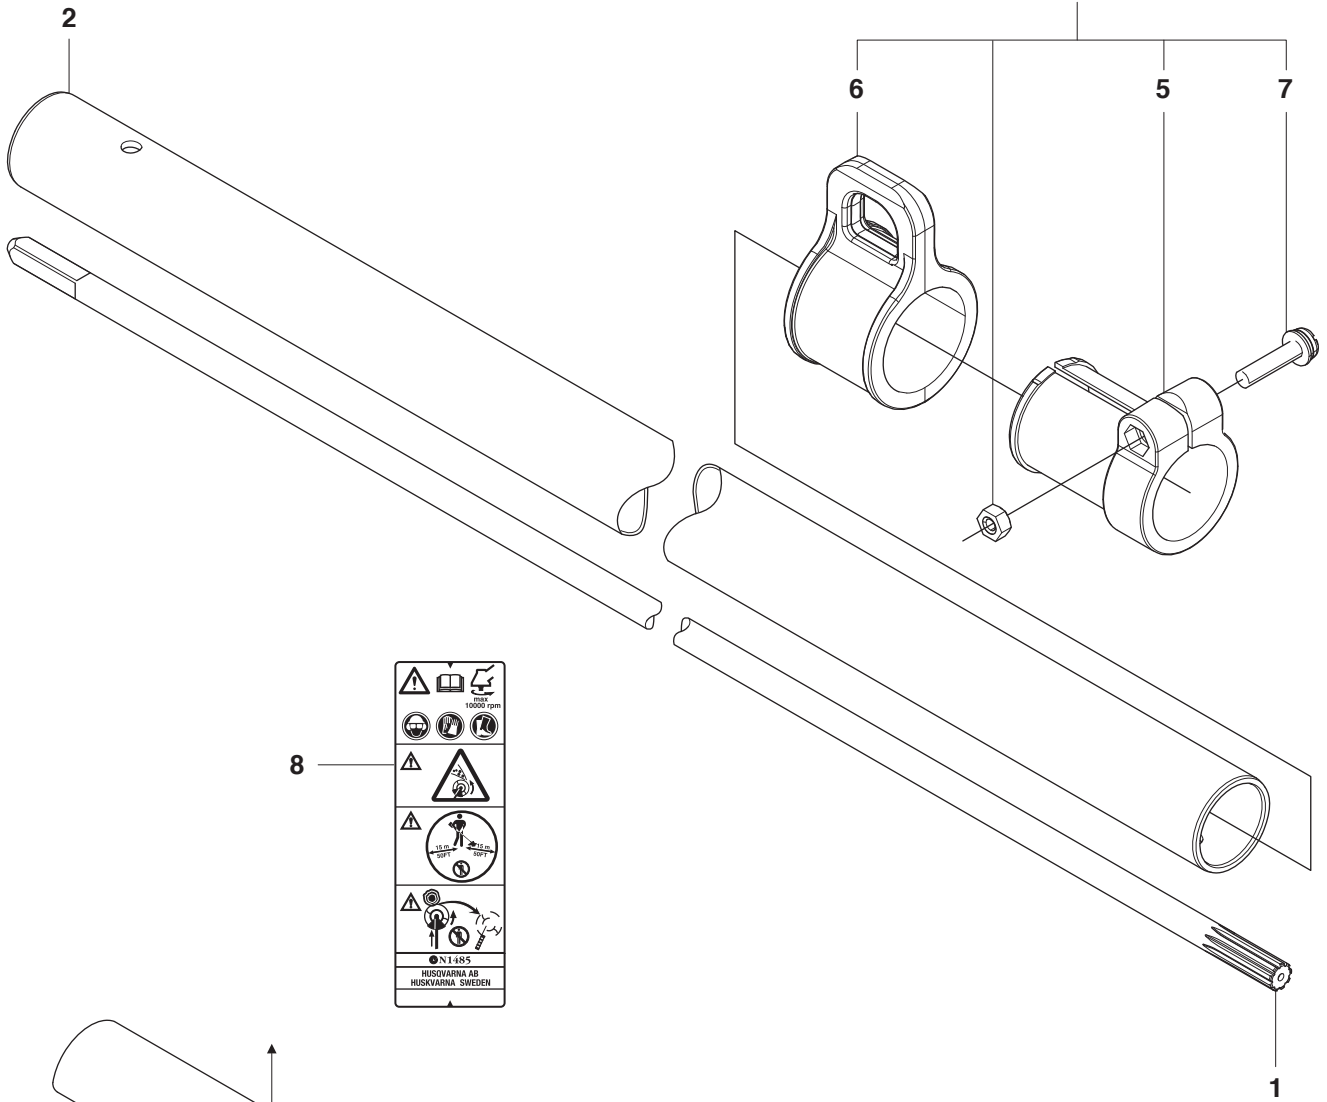

Page B 236R TUBE & SHAFT

Position	Article	Quantity	Notes	Kit
1	583 94 32-01	1		
2	521 80 67-01	1		
4	505 29 53-01	1		
5	505 29 54-01	1		4
6	505 29 55-01	1		4
7	505 29 57-01	1	M5x22	4
8	529 26 64-01	1		
11	521 53 87-01	1		

C 236R
HANDLEBAR

1

10

12

3

8

4

5

9

6

 
7

4

2



11

10

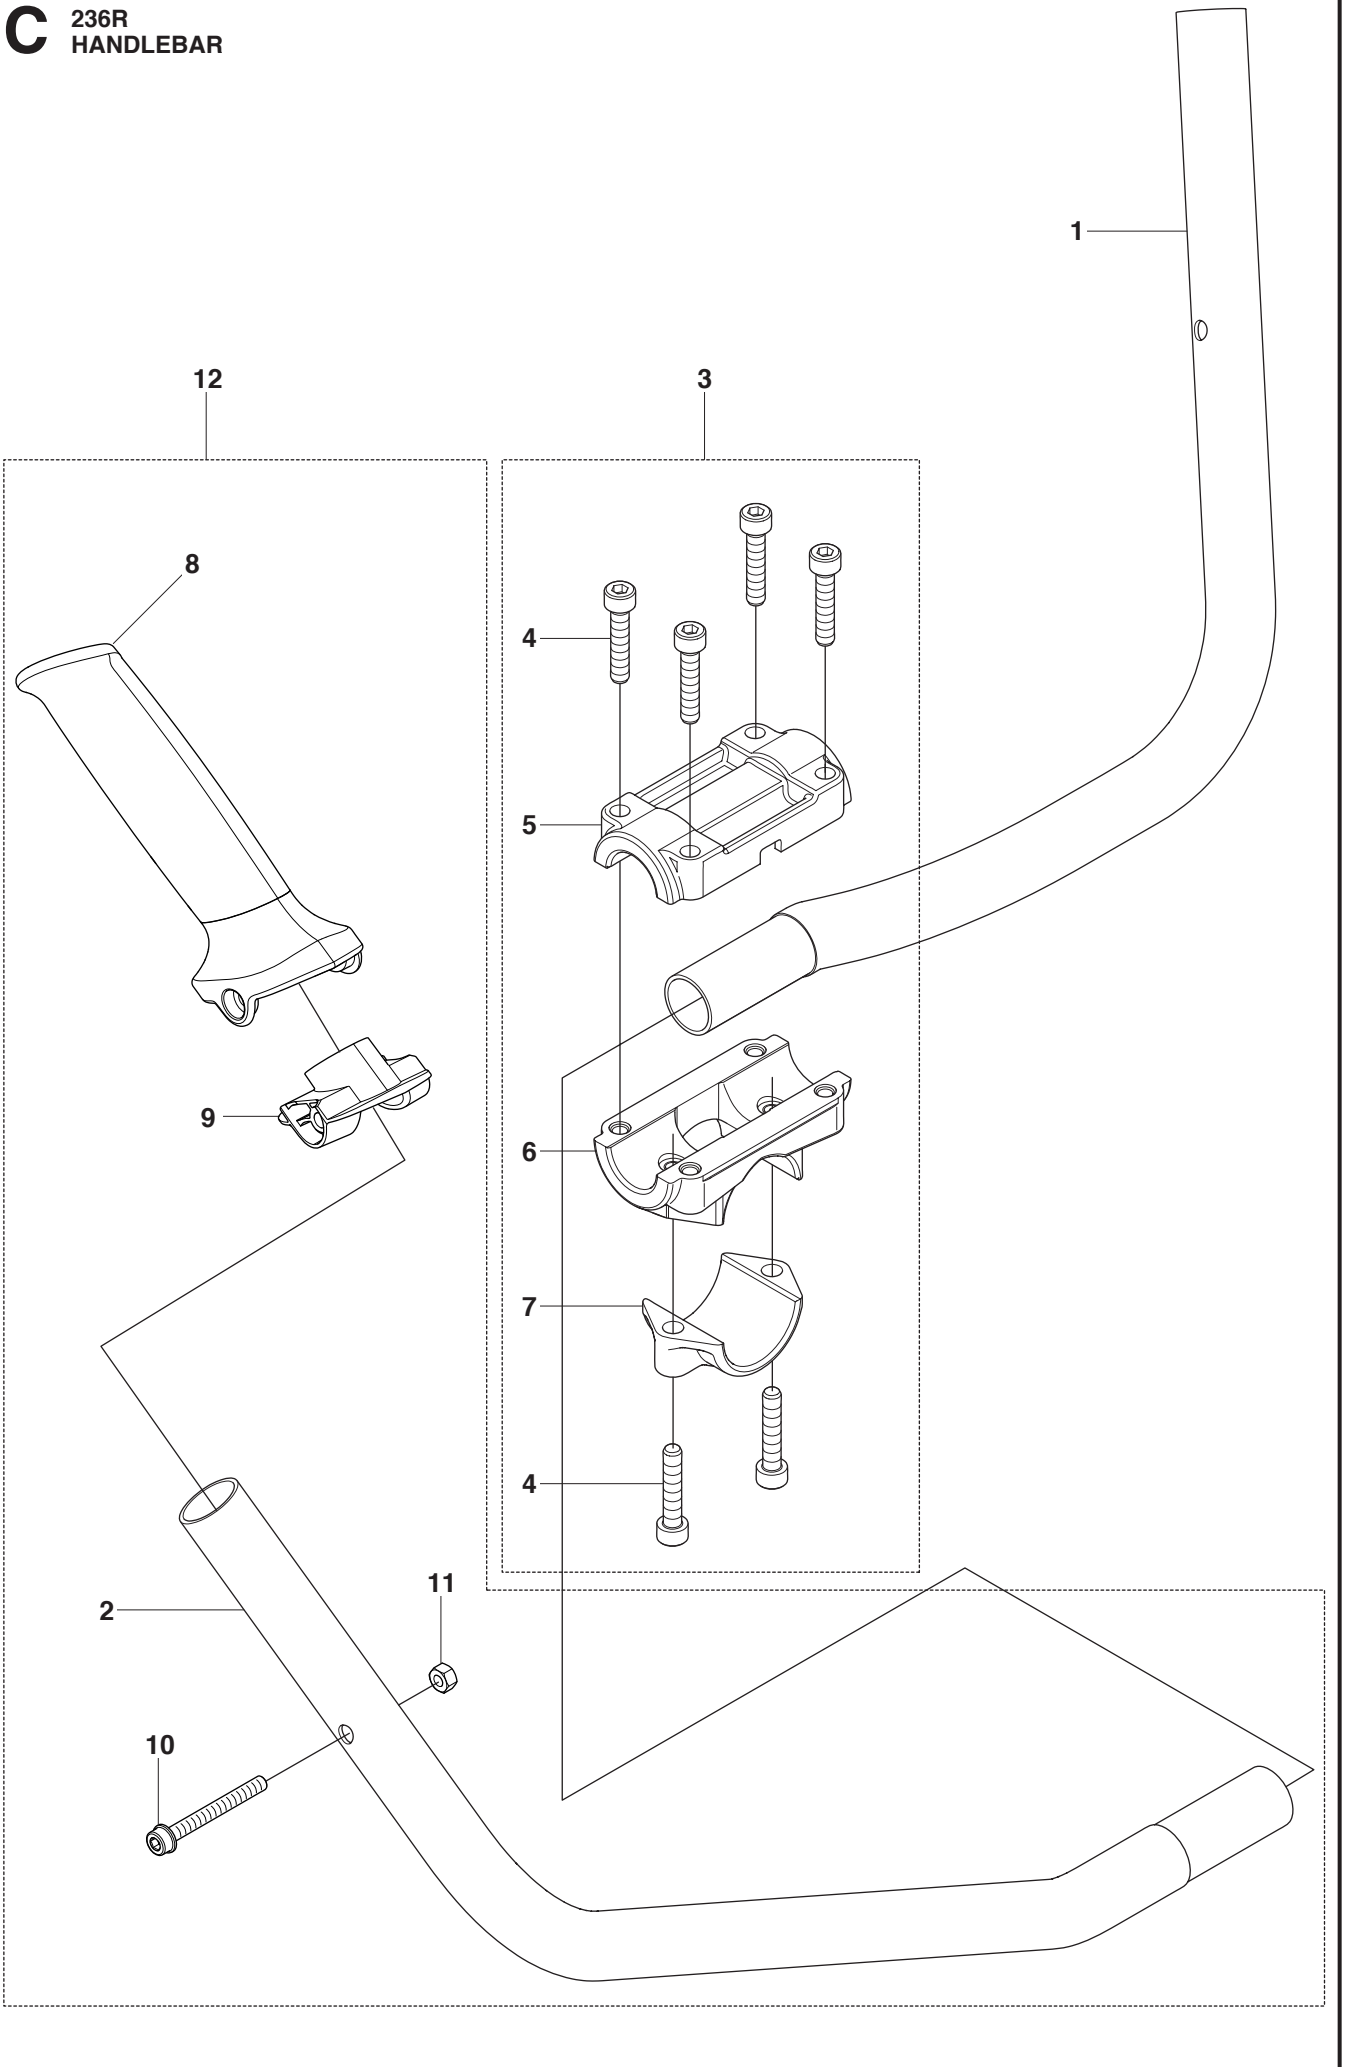


Position	Article	Quantity	Notes	Kit
1	528 81 74-01	1		
2	528 81 75-01	1		12
3	505 29 46-01	1		
4	516 07 10-01	6	Screw M5x25	3
5	505 29 49-01	1		3
6	505 29 47-01	1		3
7	505 29 48-01	1		3
8	537 17 28-02	1		
9	537 17 29-01	1		12
10	510 90 94-01	1		12
11	575 96 06-01	1		12
12	528 81 78-01	1		

  D 236R
THROTTLE HANDLE

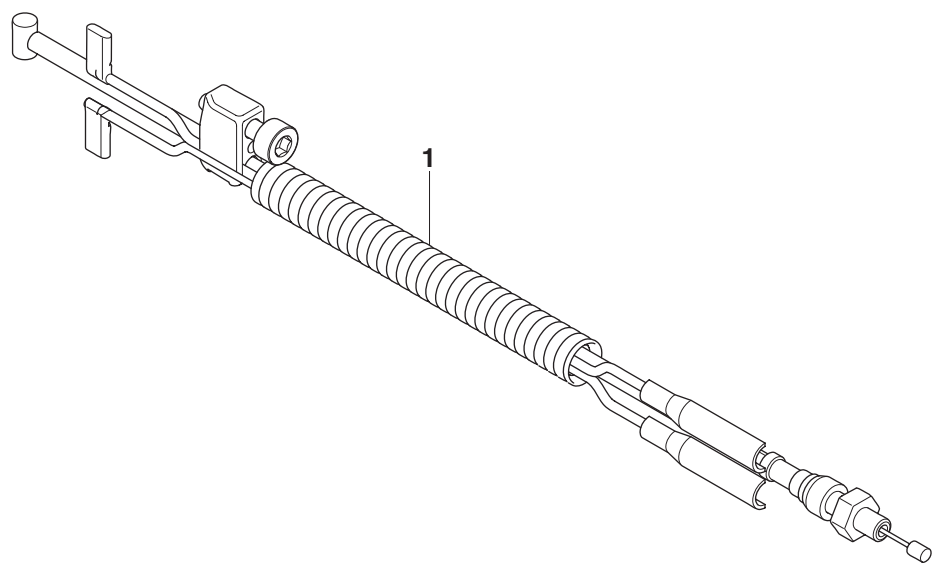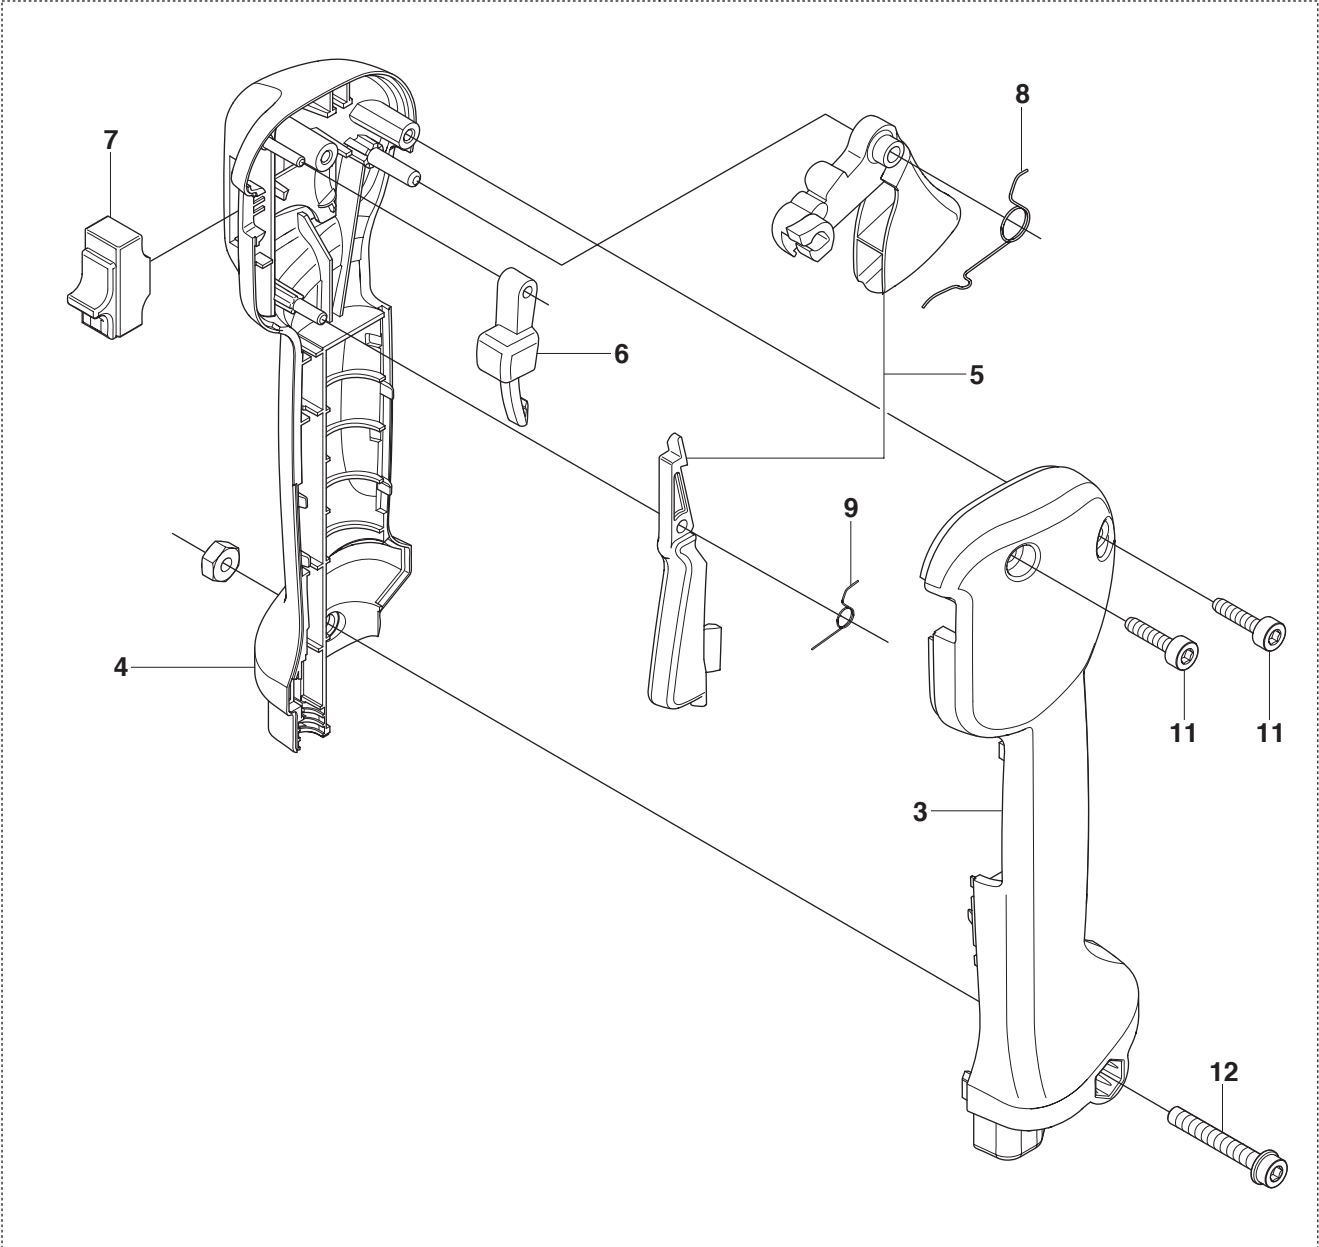


Position	Article	Quantity	Notes	Kit
1	522 03 66-01	1		
2	537 18 35-07	1		
3	537 16 03-01	1		2
4	537 16 02-03	1		2
5	506 49 77-01	1		2
6	537 16 07-03	1		2
7	503 71 82-01	1		2
8	537 17 42-01	1		2
9	537 17 43-01	1		2
11	503 21 66-74	2		2
12	503 20 07-82	1		2

 E 236R
CLUTCH

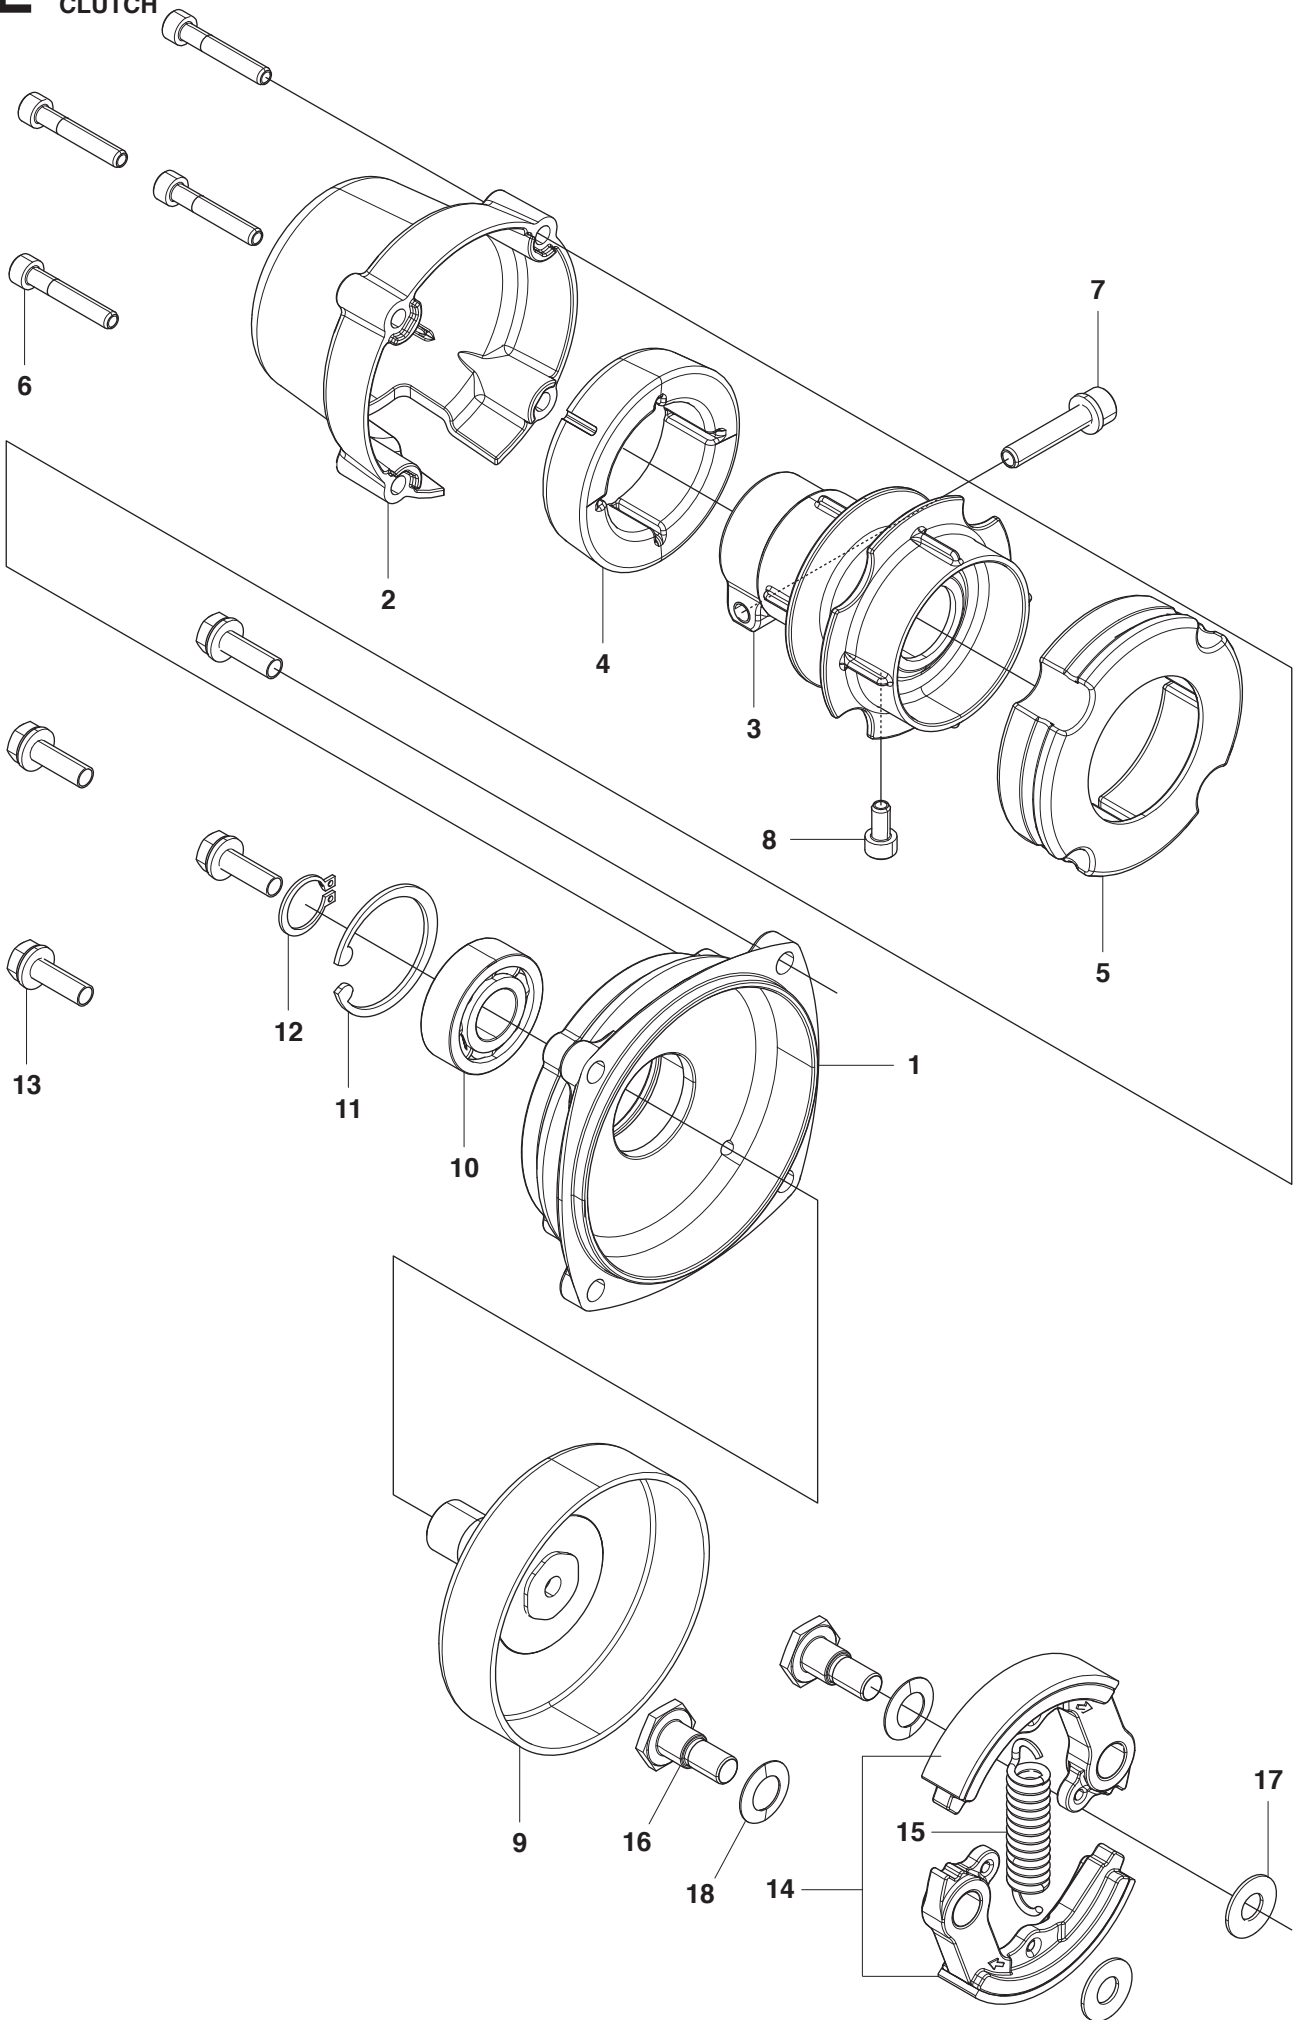


Position	Article	Quantity	Notes	Kit
1	505 29 29-01	1		
2	505 29 30-01	1		
3	505 29 32-01	1		
4	505 29 33-01	1		
5	505 29 34-01	1		
6	506 60 94-01	4		
7	522 65 54-01	1		
8	505 16 99-01	1		
9	505 29 38-01	1		
10	516 13 17-01	1		
11	510 55 13-01	1		
12	516 12 42-01	1		
13	505 31 24-01	4		
14	513 37 15-01	1		
15	513 37 16-01	1		
16	505 29 78-01	2		
17	505 29 80-01	2		
18	505 29 81-01	2		

 F 236R
IGNITION

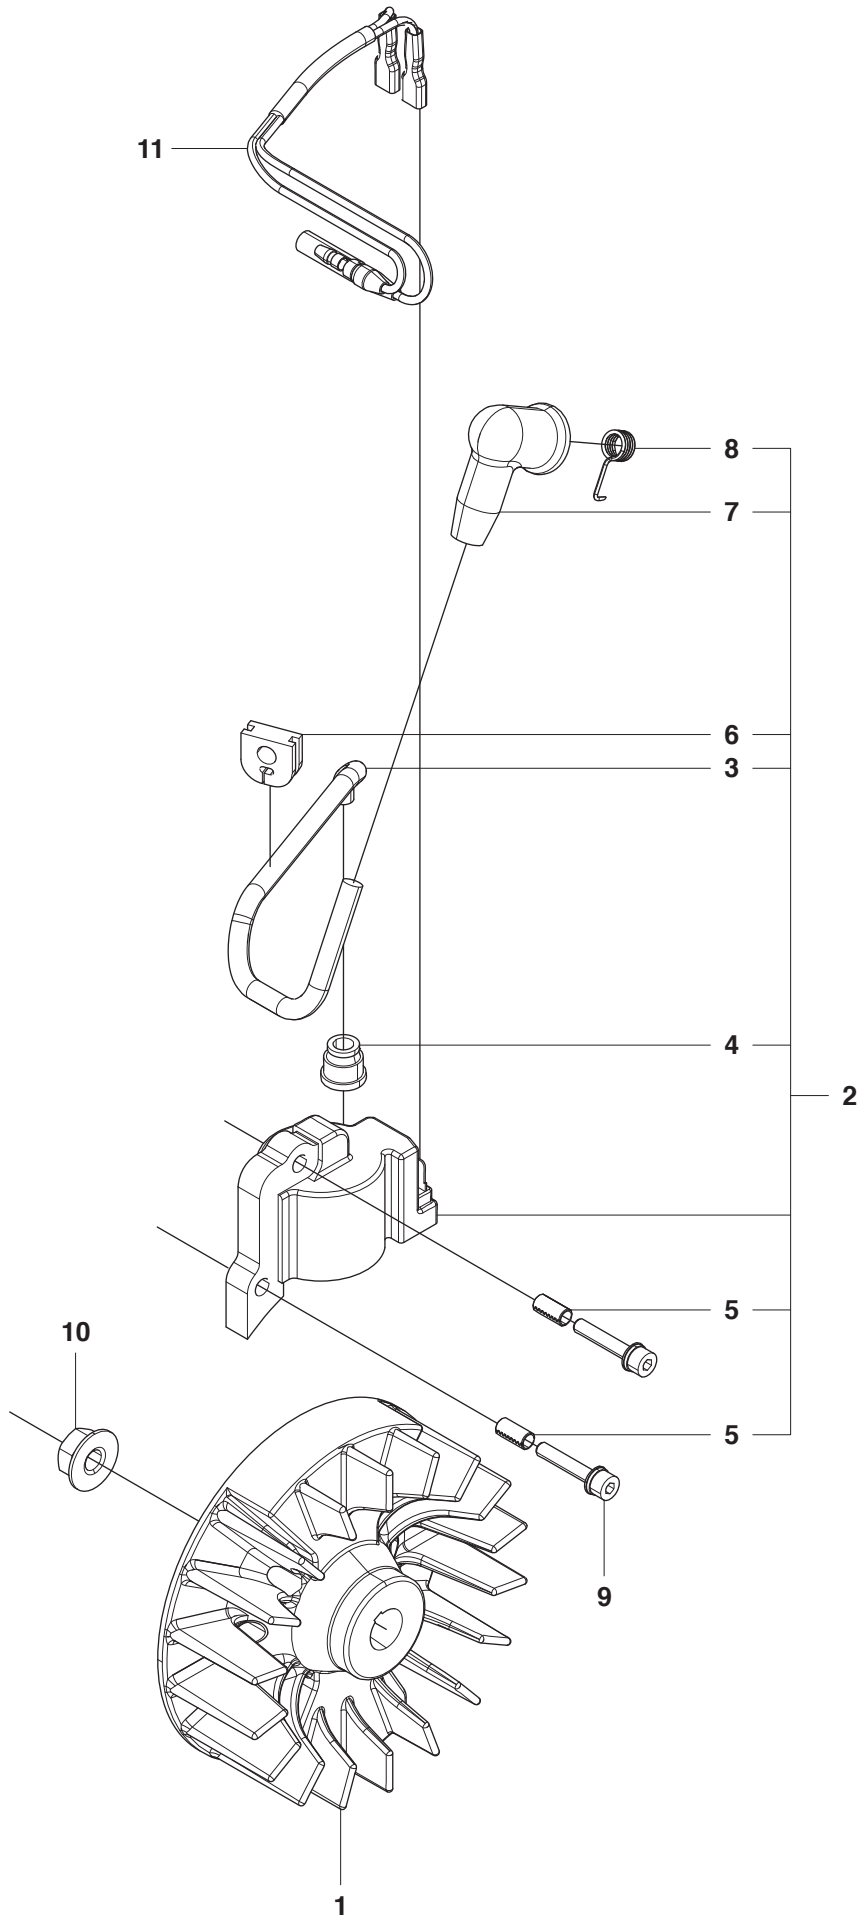

Position	Article	Quantity	Notes	Kit
1	505 29 82-01	1		
2	505 29 83-01	1		
3	505 29 84-01	1		2
4	505 04 28-01	1		2
5	505 29 86-01	2		2
6	515 41 53-01	1		2
7	505 29 88-01	1		2
8	505 29 89-01	1		2
9	505 29 90-01	2		
10	504 11 80-01	1		
11	529 25 29-01	1		

 G 236R
CYLINDER COVER

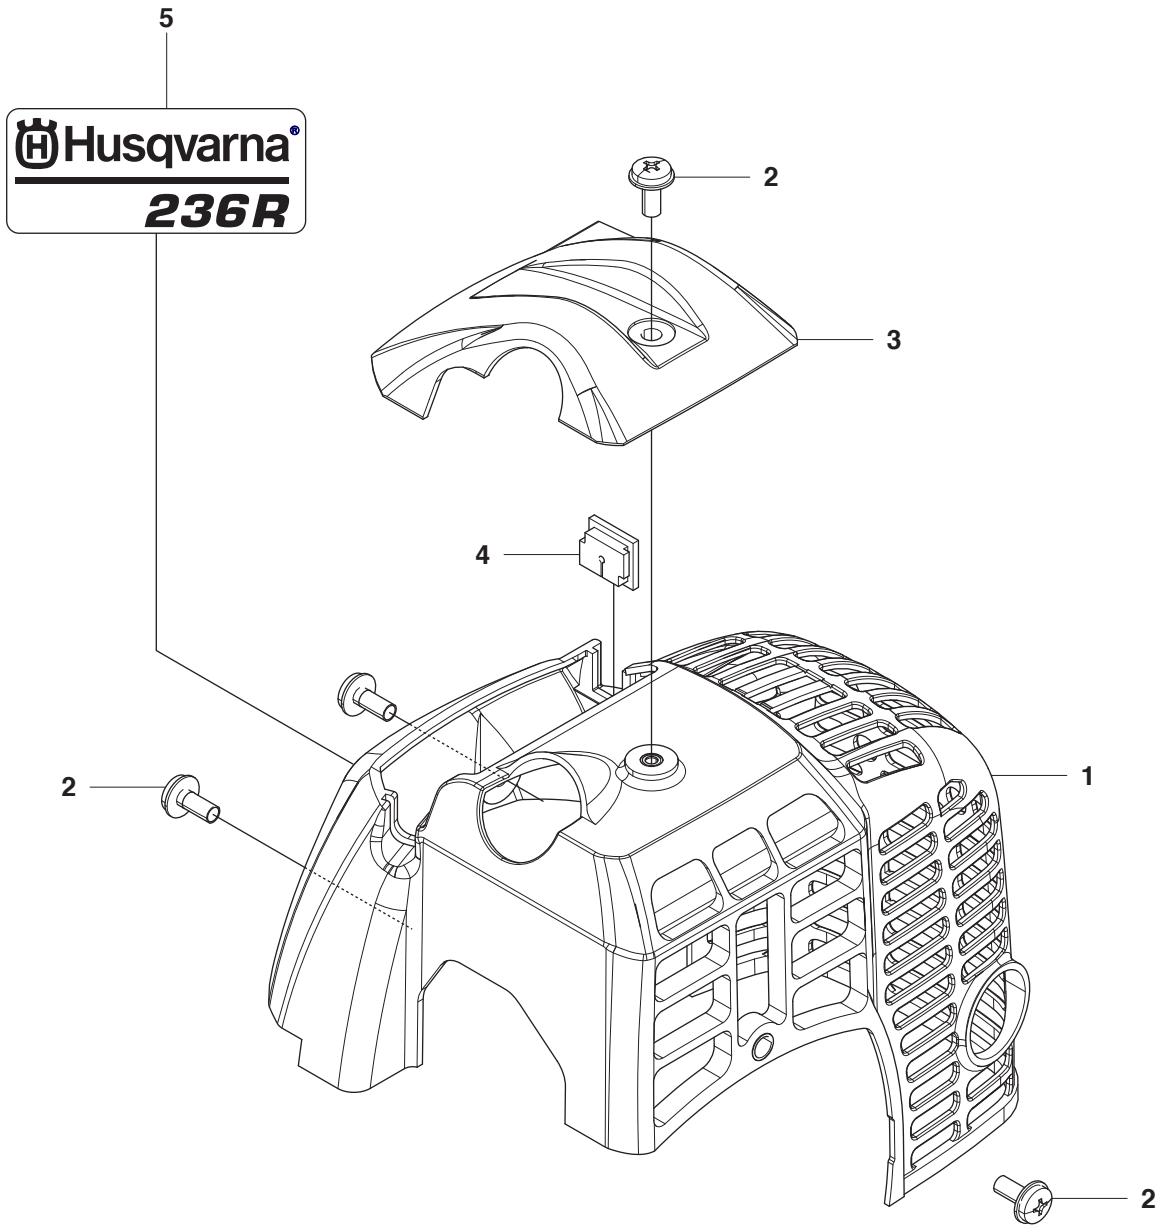


Page G

236R

CYLINDER COVER

Position	Article	Quantity	Notes	Kit
1	505 30 05-01	1		
2	505 30 06-01	4		
3	505 30 11-01	1		
4	505 30 13-01	1		
5	528 74 89-01	1		

 H 236R
MUFFLER

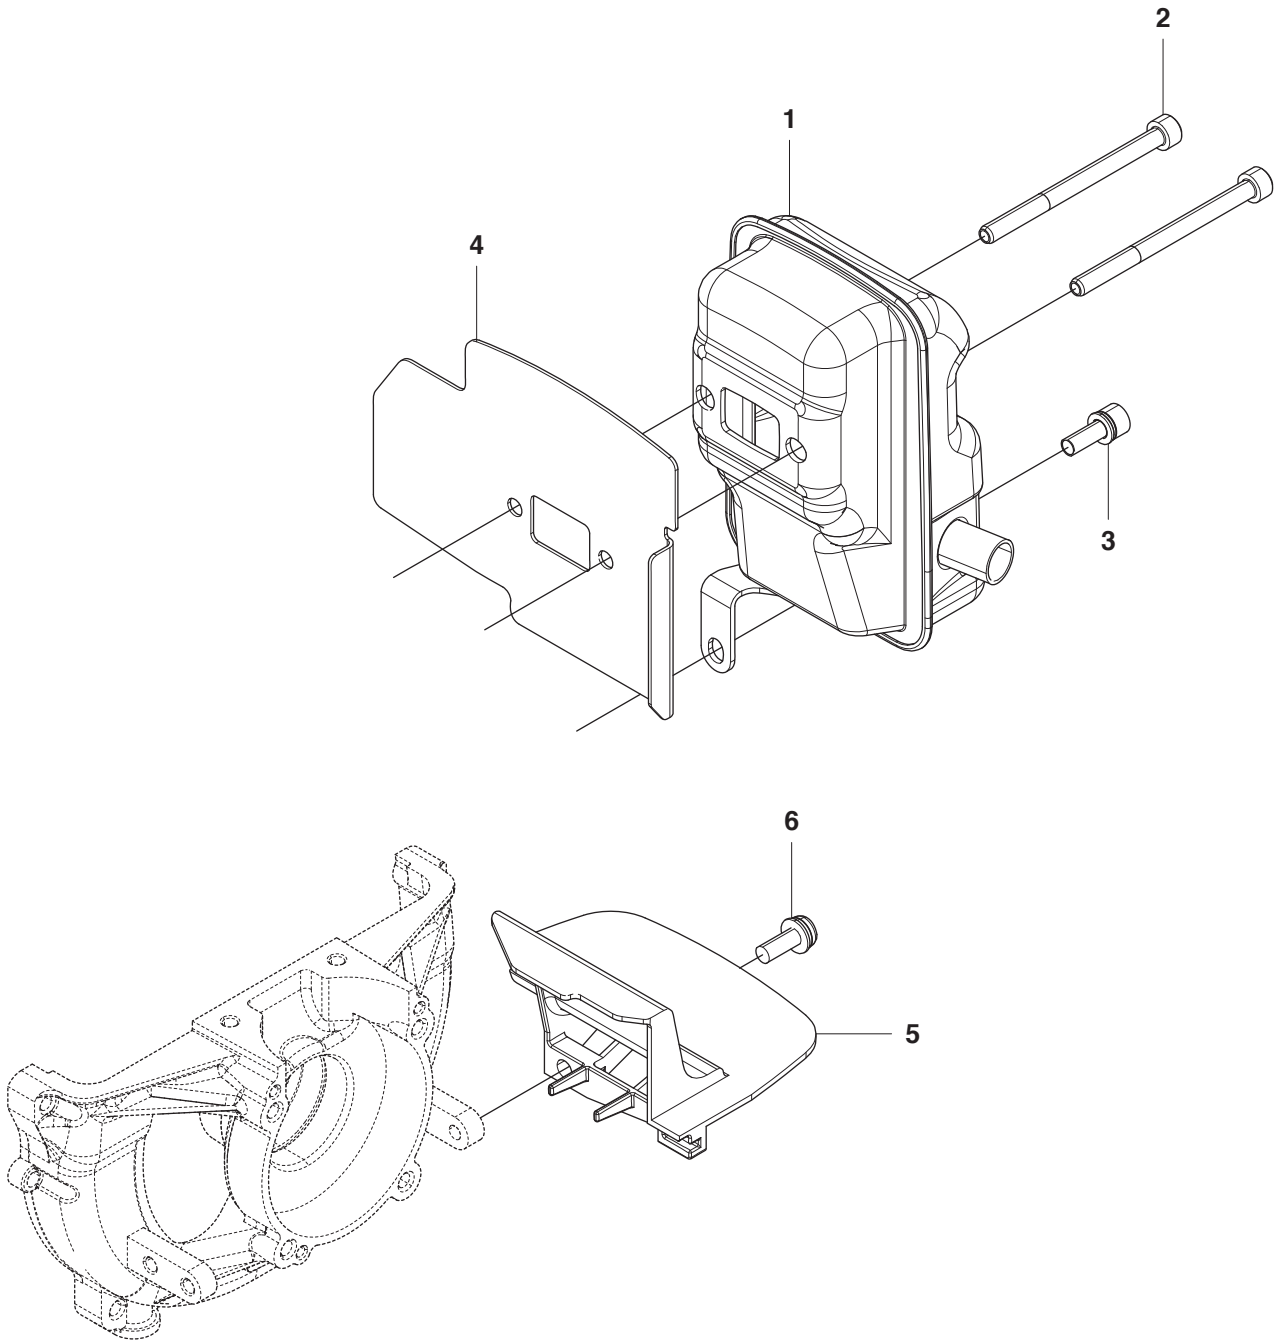


Page H

236R

MUFFLER

Position	Article	Quantity	Notes	Kit
1	515 37 45-01	1		
2	516 07 15-01	2		
3	505 29 95-01	1		
4	526 52 28-01	1		
5	505 29 97-01	1		
6	505 29 98-01	1		

 J 236R
STARTER

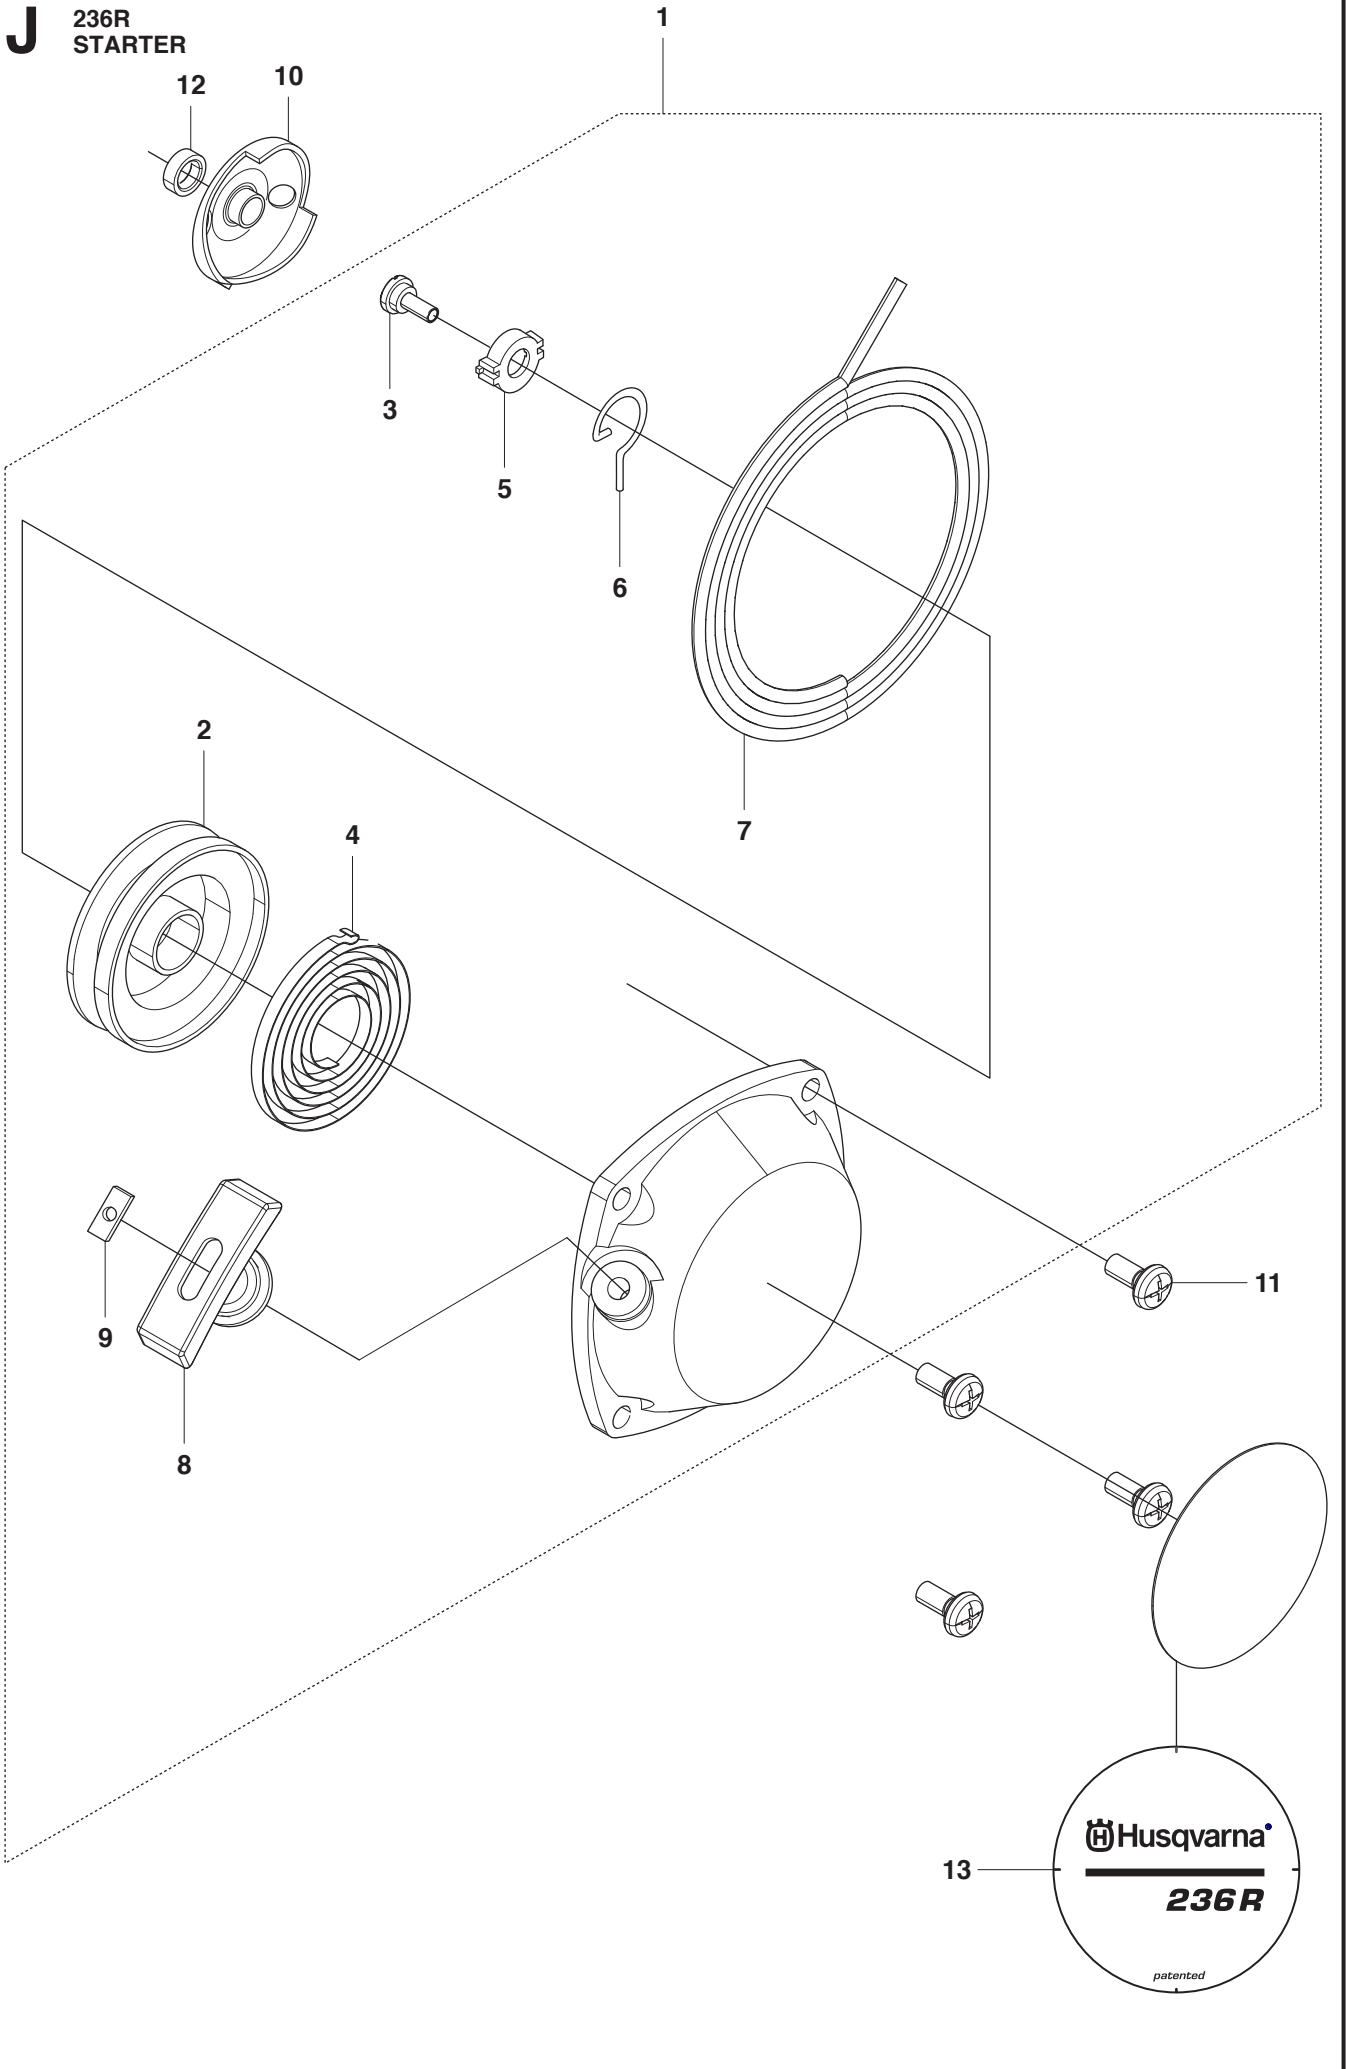


Husqvarna
236R
patented

Position	Article	Quantity	Notes	Kit
1	505 30 17-01	1		
2	504 11 47-01	1		1
3	515 36 71-01	1		1
4	504 11 50-01	1		1
5	504 11 46-01	1		1
6	504 11 48-01	1		1
7	505 30 28-01	1		1
8	505 30 34-01	1		1
9	504 11 40-01	1		1
10	504 11 44-01	1		
11	505 30 44-01	4		
12	505 30 46-01	1		
13	528 74 90-01	1		


K 236R
TANK

 1

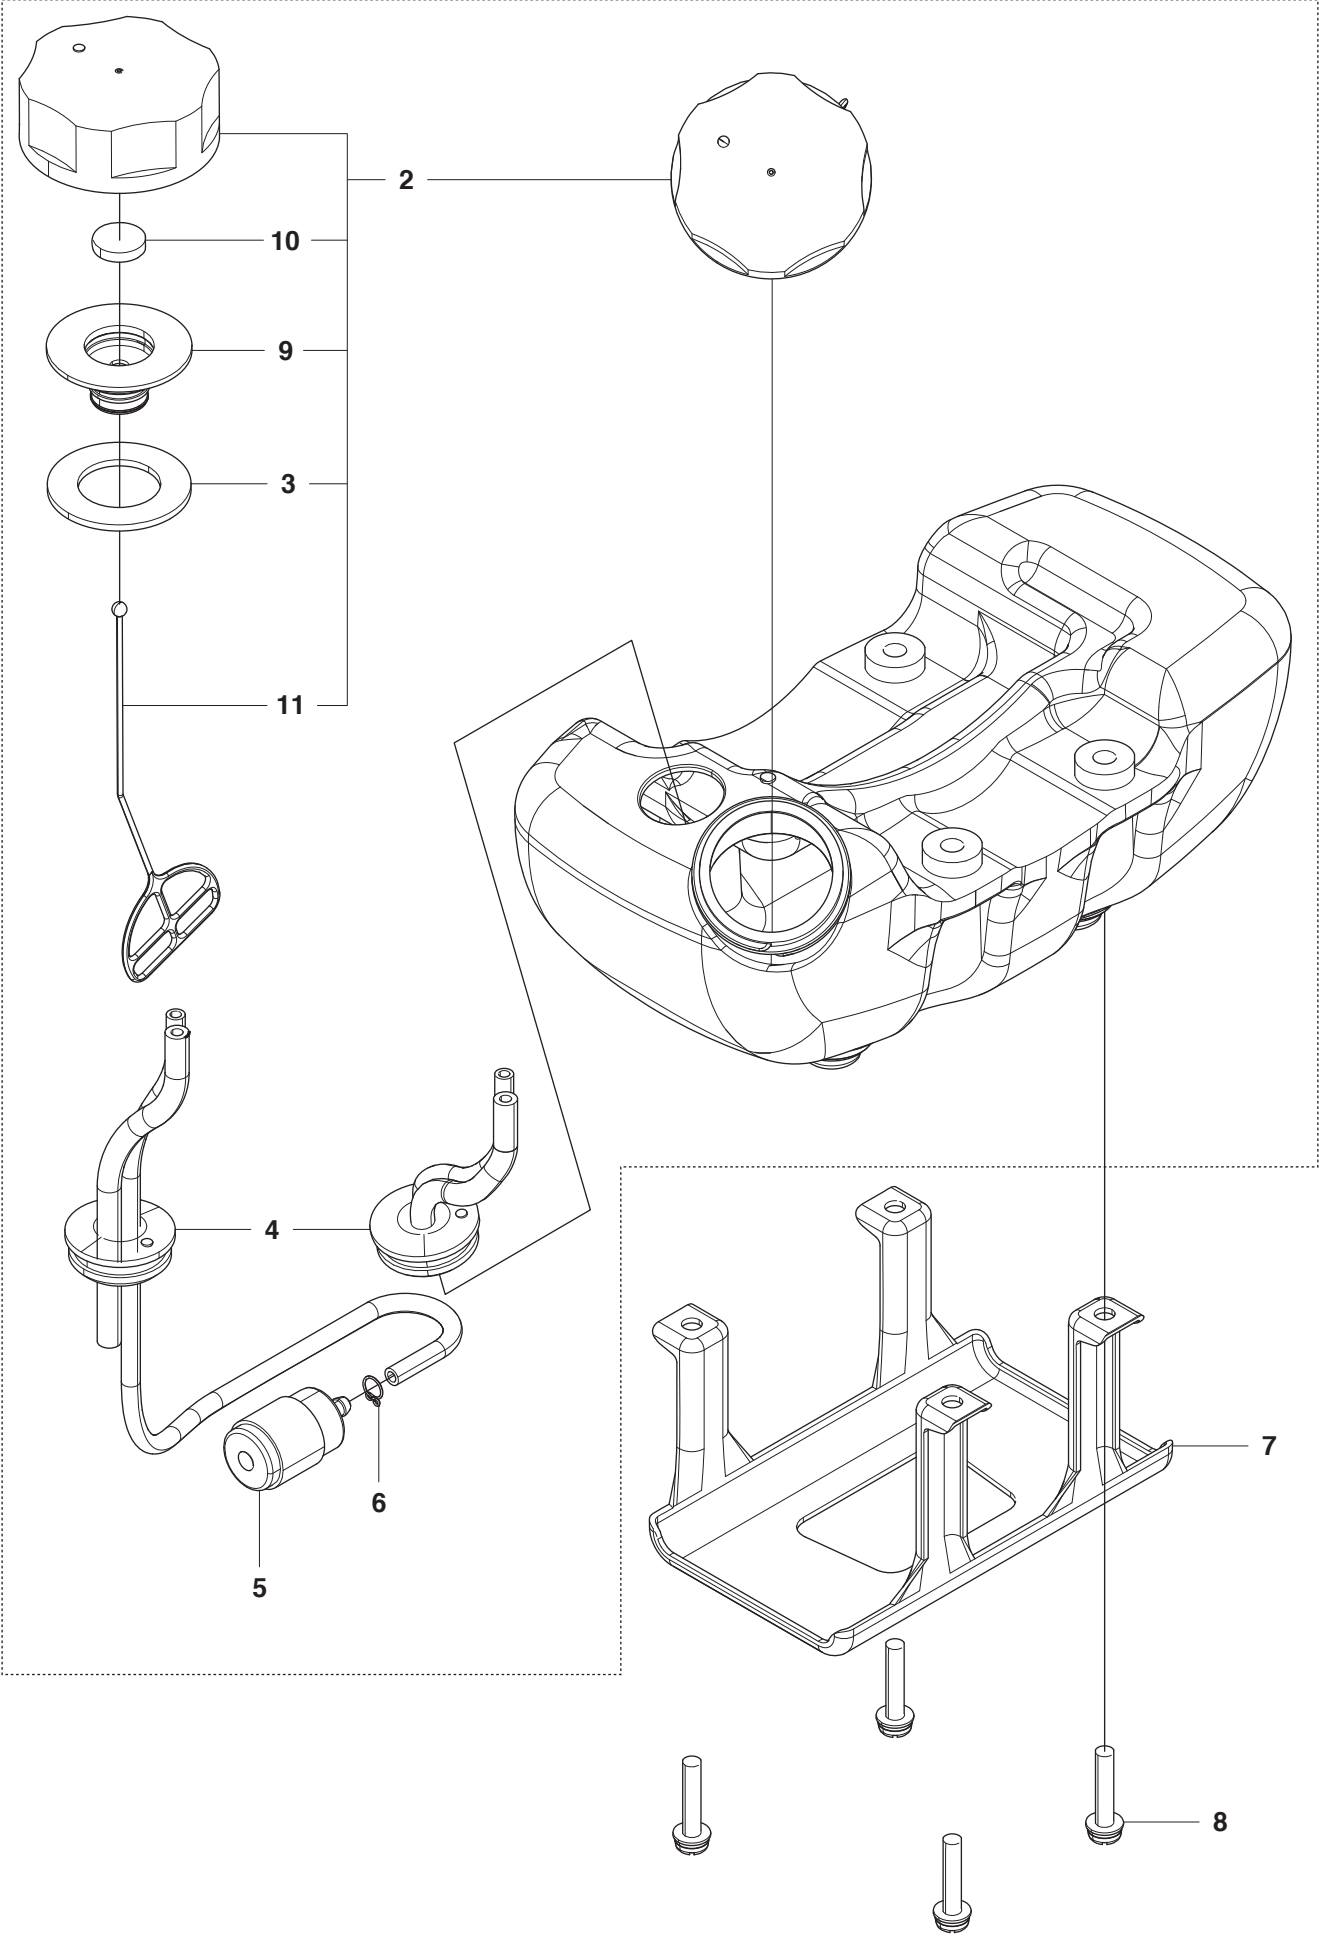


Position	Article	Quantity	Notes	Kit
1	579 59 20-01	1		
2	505 30 96-01	1		1
3	506 74 43-01	1		2, 1
4	515 41 84-01	1		1
5	506 74 26-01	1		1
6	506 70 70-01	1		1
7	505 31 09-01	1		
8	505 31 10-01	4		
9	515 36 94-01	1		2
10	506 74 68-01	1		2
11	506 74 58-01	1		2

 L 236R
INTAKE

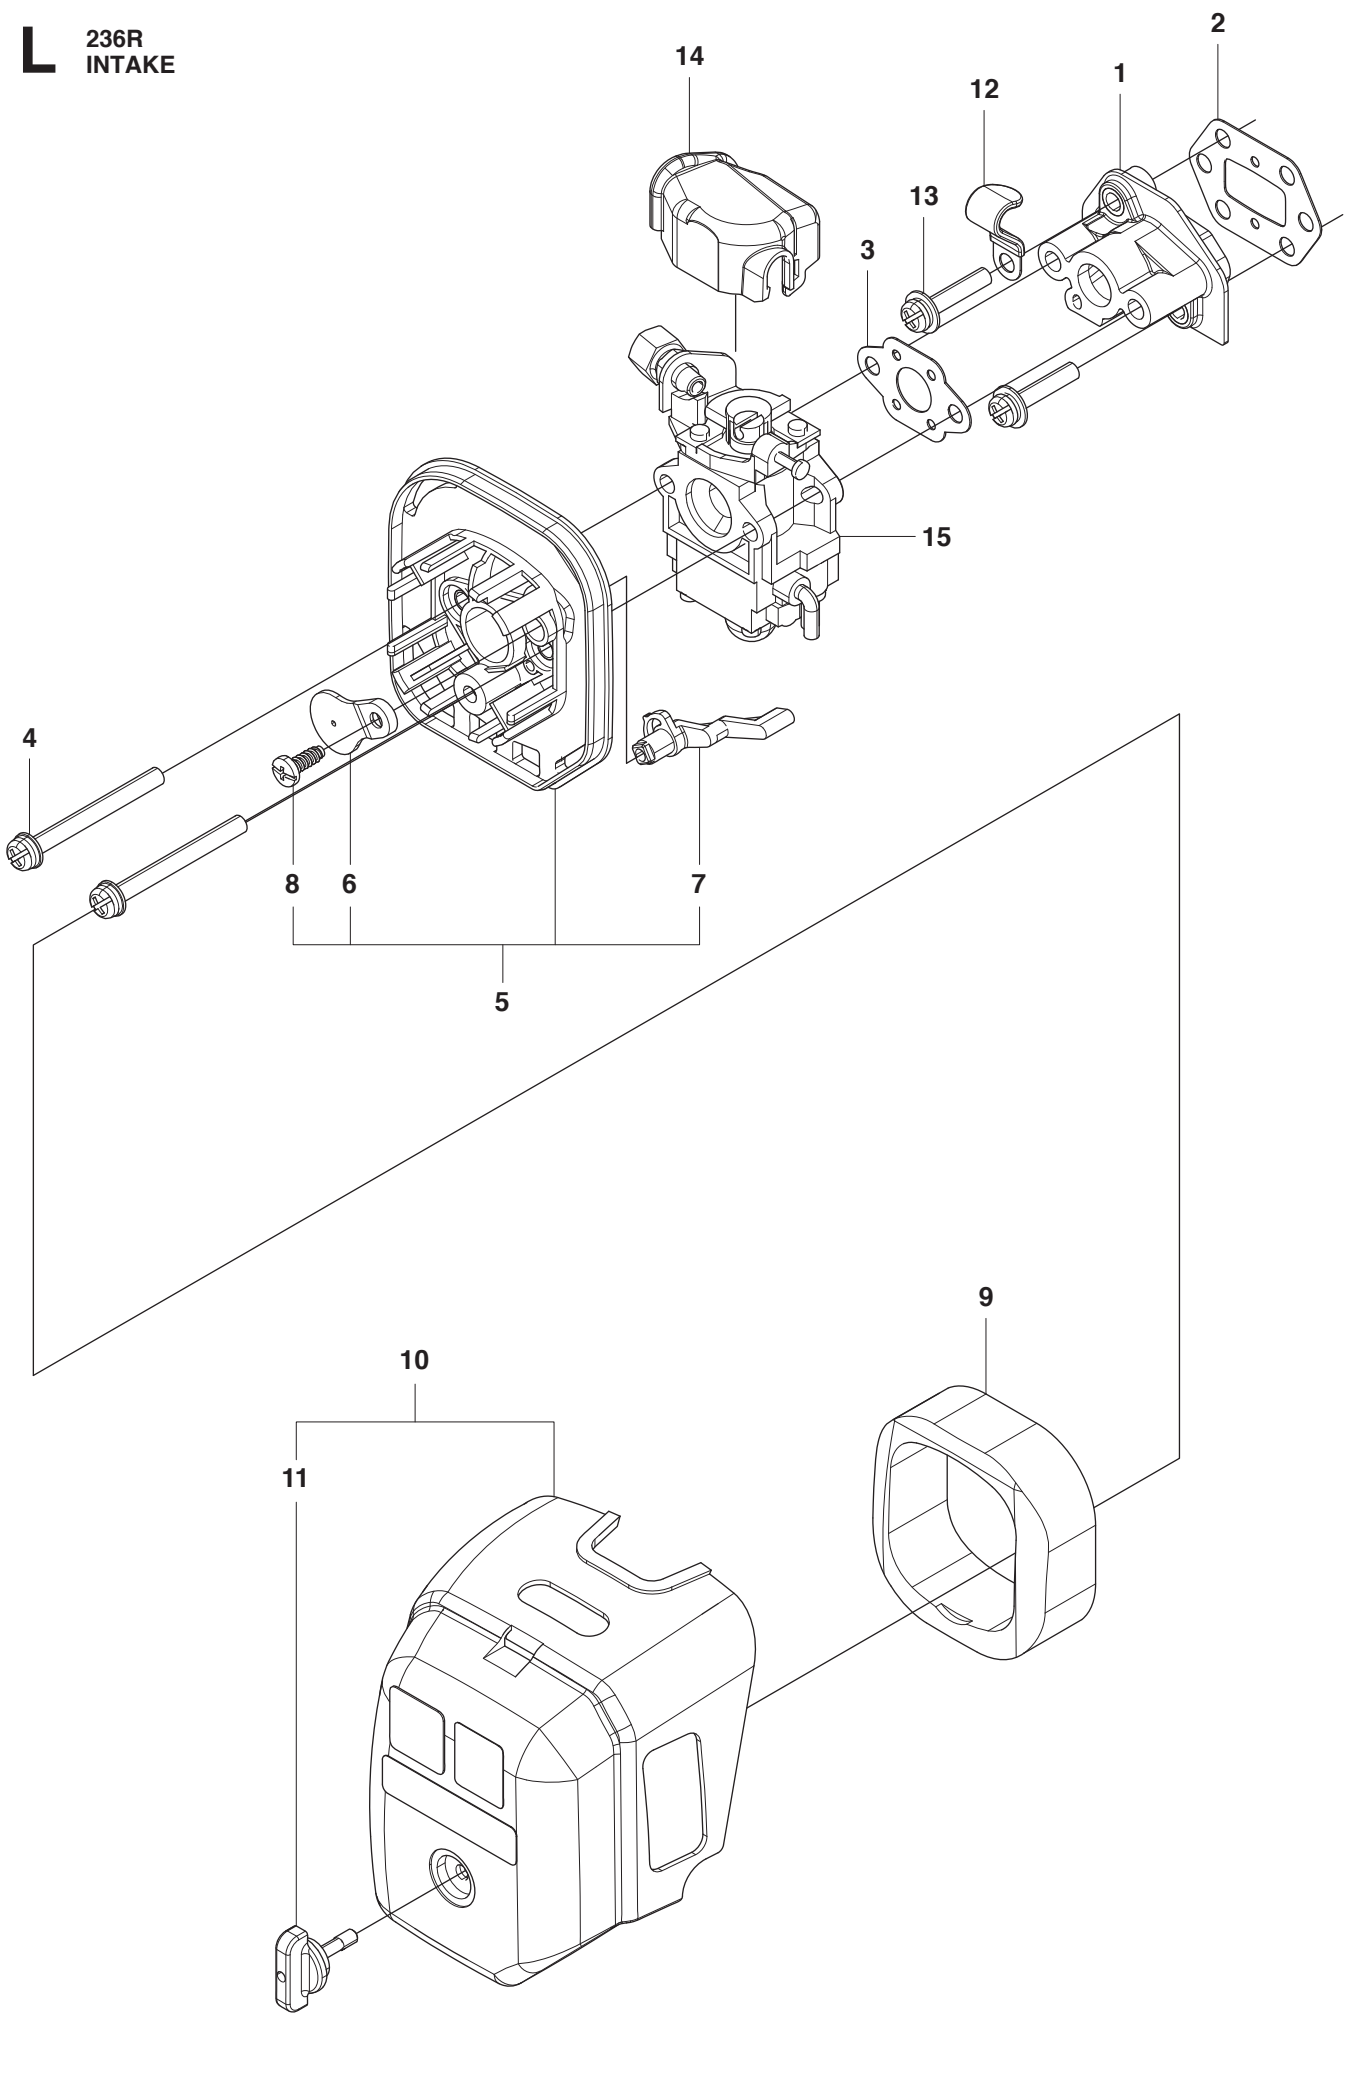


Position	Article	Quantity	Notes	Kit
1	526 52 05-01	1		
2	505 30 49-01	1		
3	505 30 50-01	1		
4	505 30 87-01	2		
5	505 30 88-01	1		
6	505 30 89-01	1		5
7	505 30 90-01	1		5
8	506 61 40-01	1		5
9	505 30 92-01	1		
10	505 30 93-01	1		
11	523 07 13-01	1		10
12	521 52 51-01	1		
13	505 30 48-01	2		
14	506 74 42-01	1		
15	528 74 88-01	1		

 M 236R
CYLINDER & PISTON

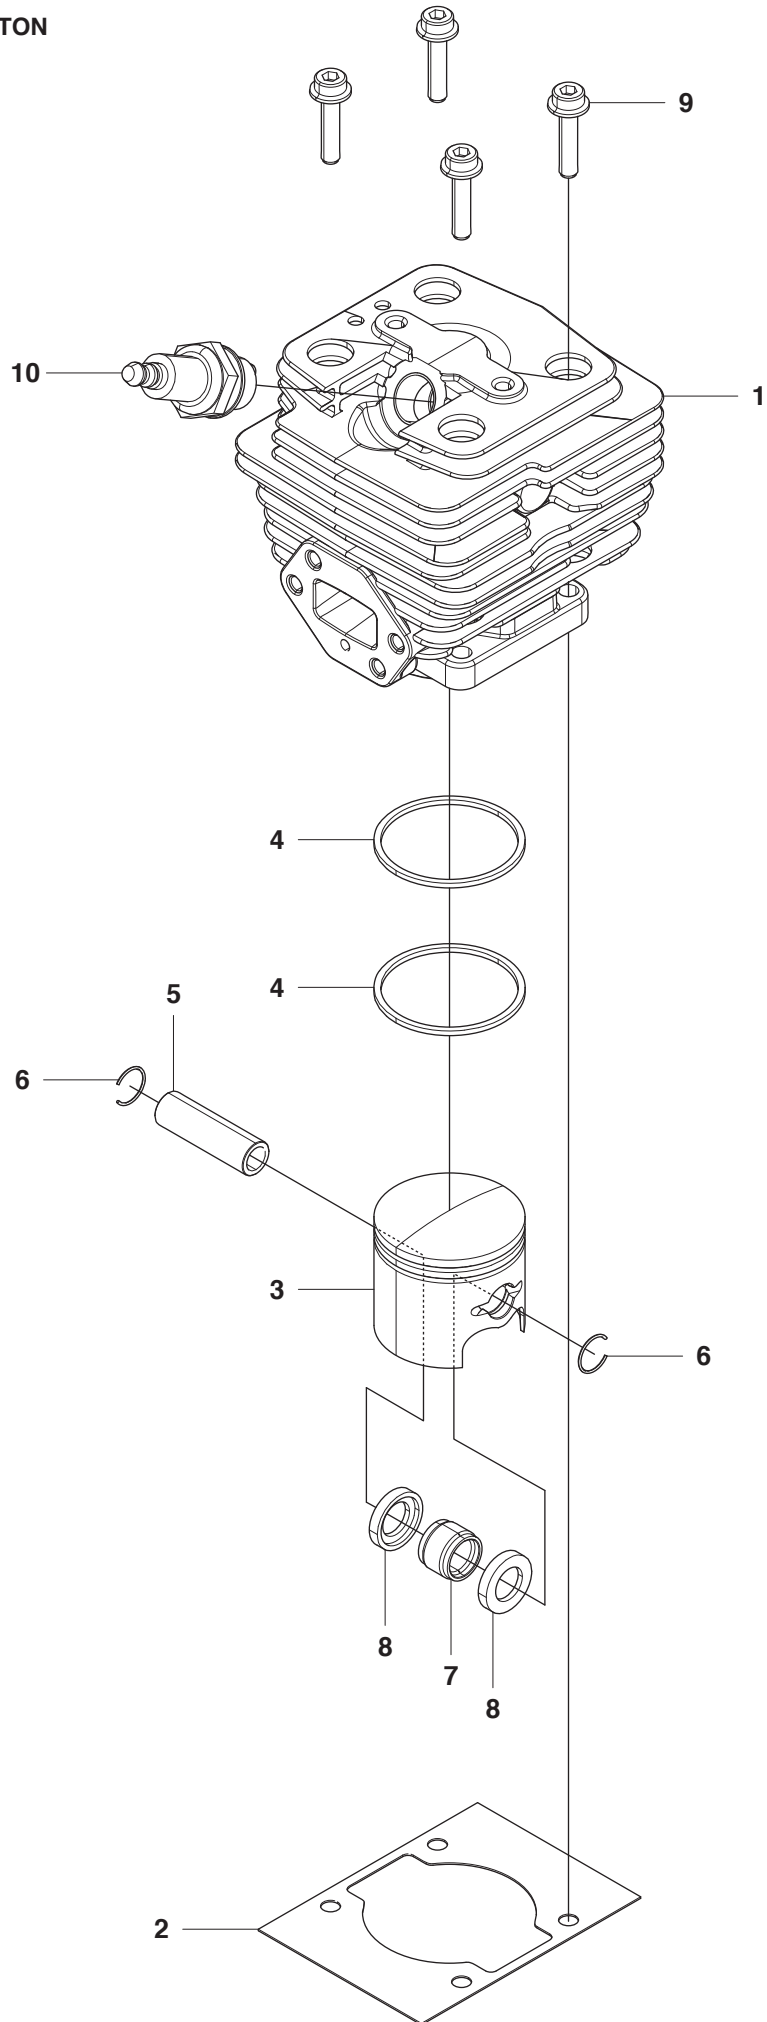

Position	Article	Quantity	Notes	Kit
1	512 27 22-01	1		
2	510 06 43-01	1		
3	515 37 51-01	1		
4	510 91 77-01	2		
5	510 91 66-01	1		
6	516 28 30-01	2		
7	505 29 73-01	1		
8	513 75 24-01	2		
9	51341 25-01	4		
10	515 49 74-01	1		

 N 236R
CRANKSHAFT

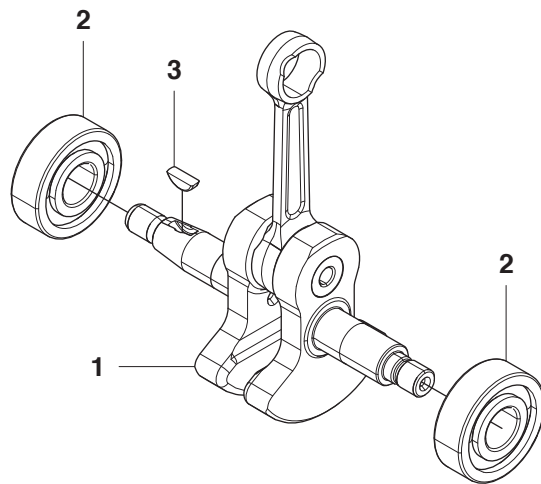


Page N 236R

CRANKSHAFT


Position	Article	Quantity	Notes	Kit
1	505 29 75-01	1		
2	505 29 65-01	2		
3	506 68 94-01	1		

 P 236R
CRANKCASE

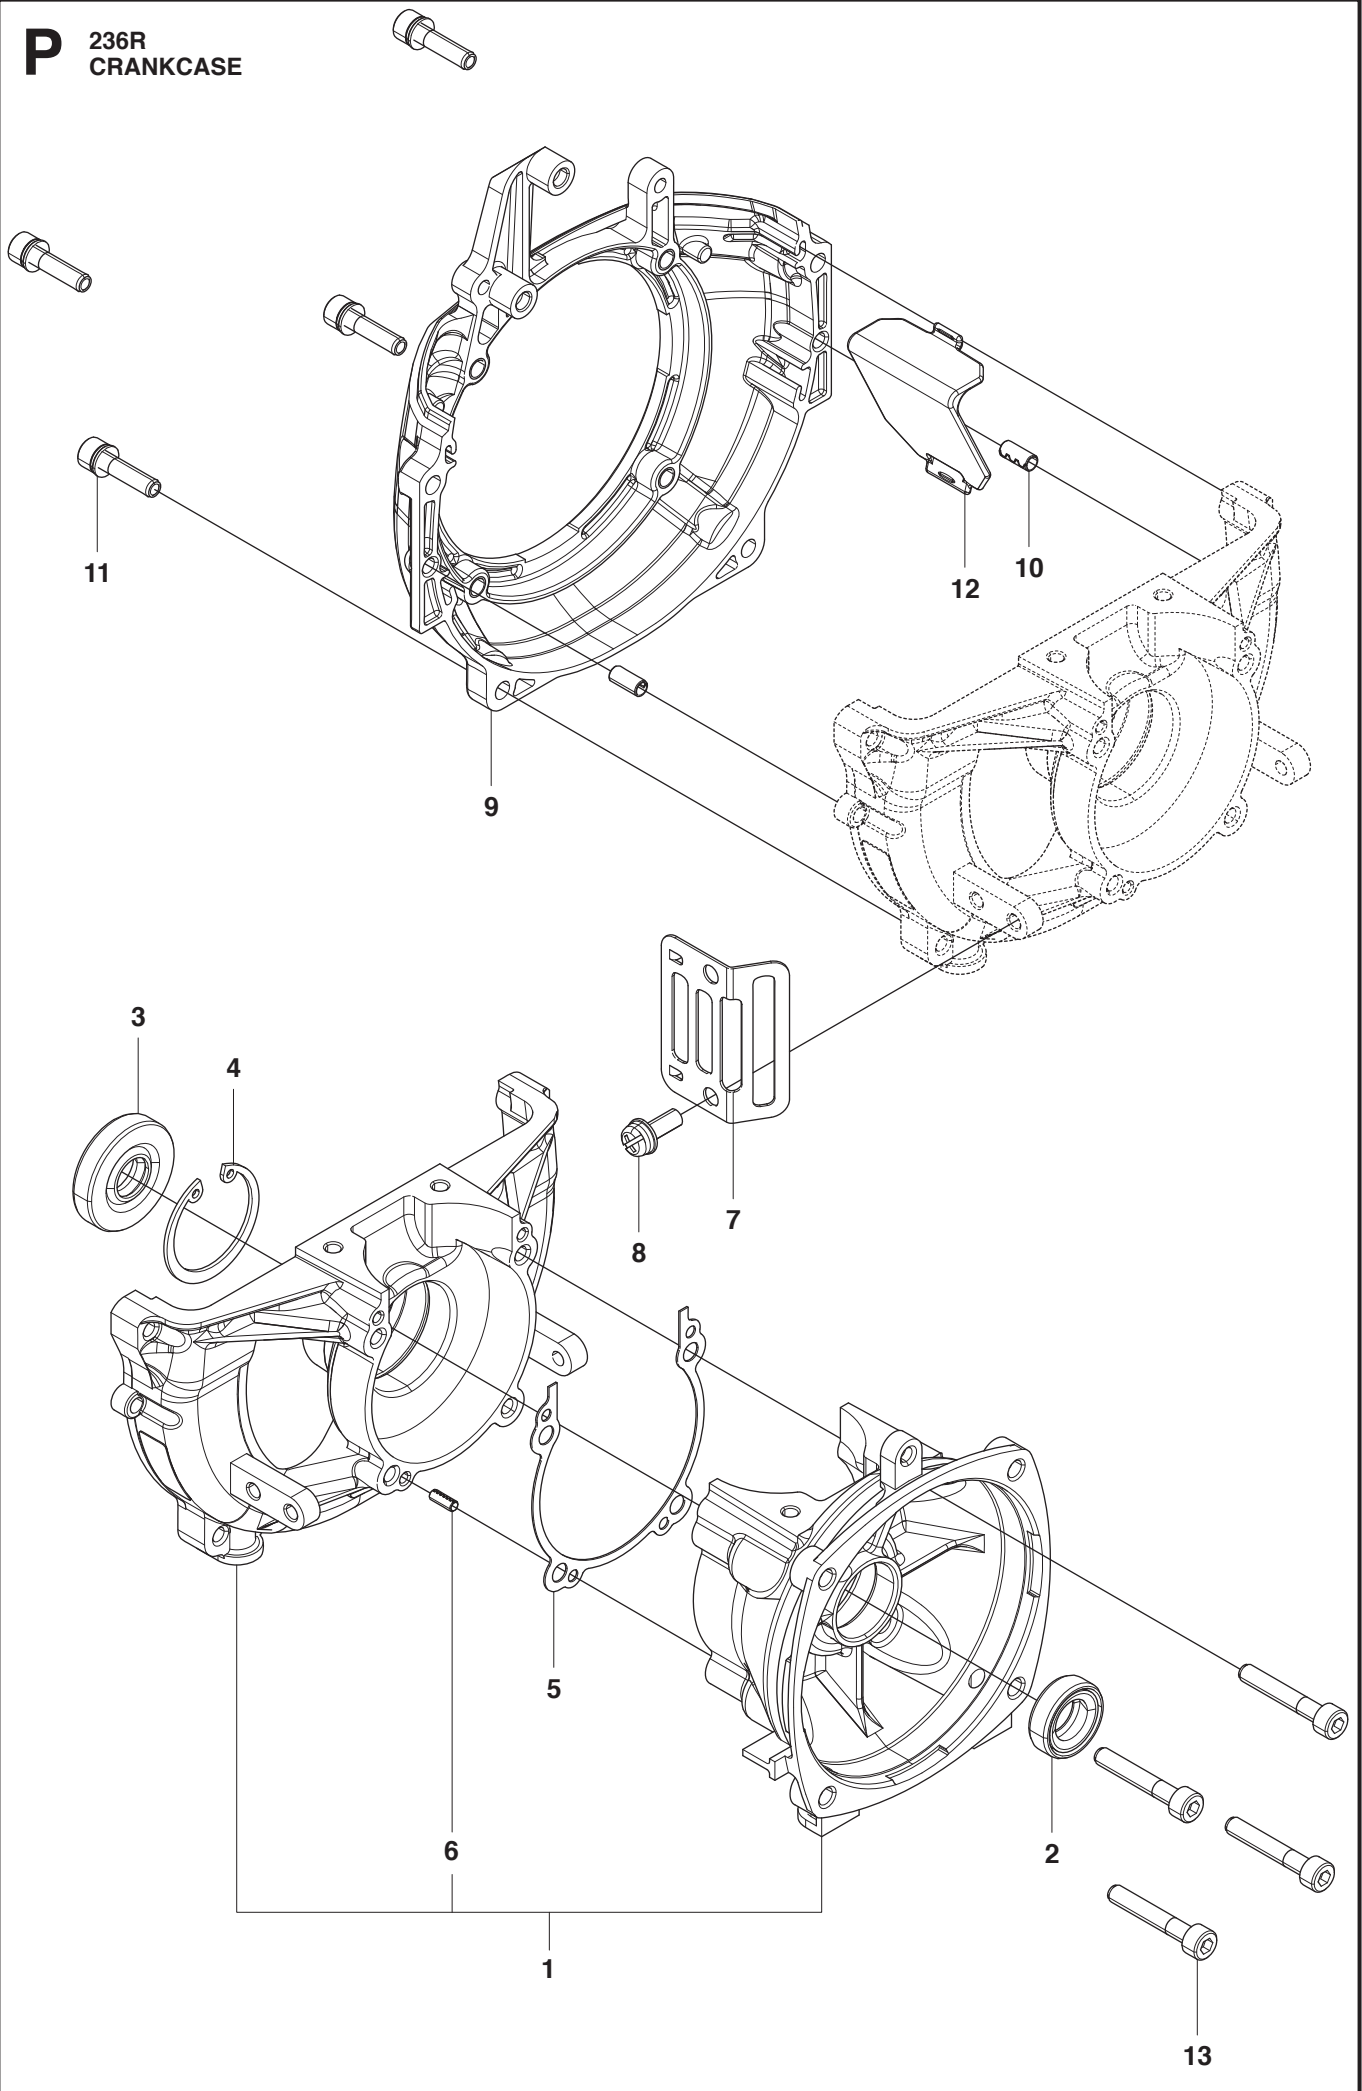









Position	Article	Quantity	Notes	Kit
1	505 29 60-01	1		
2	504 12 15-01	1		
3	505 29 67-01	1		
4	504 12 10-01	1		
5	505 29 64-01	1		
6	505 29 61-01	3		1
7	505 29 62-01	1		
8	505 29 98-01	1		
9	574 72 12-01	1		
10	505 30 00-01	2		
11	505 30 02-01	4		
12	505 30 04-01	1		
13	506 60 94-01	4		

 Q 236R
CARBURETTOR

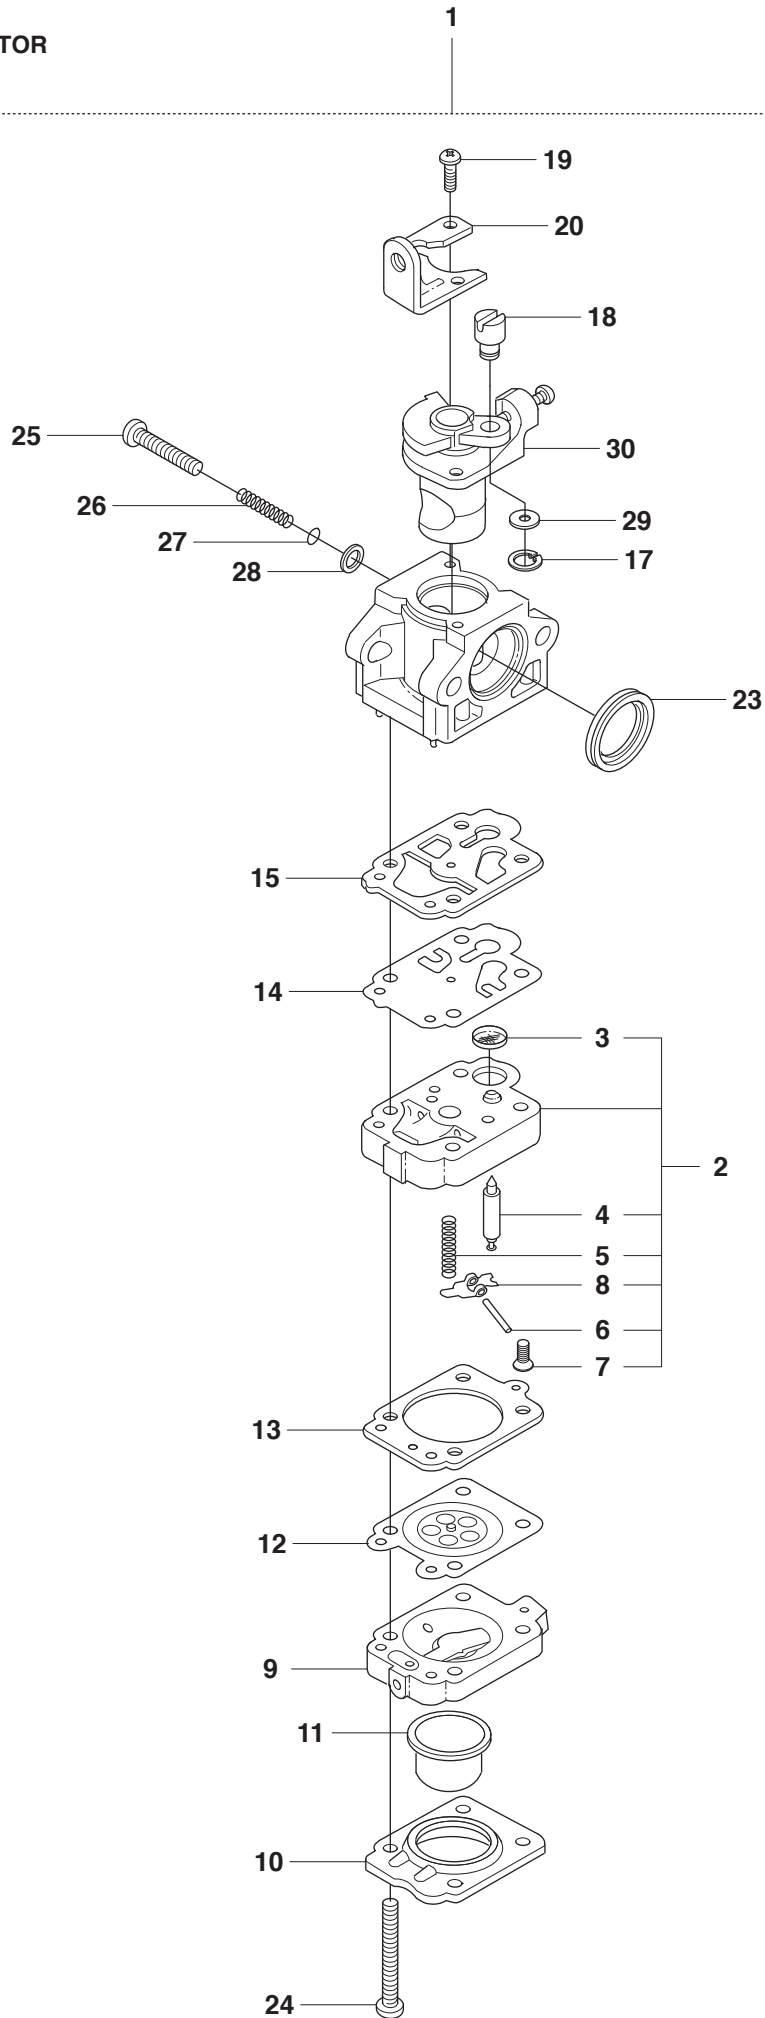

Position	Article	Quantity	Notes	Kit
1	528 74 88-01	1		
2	502 23 84-01	1		1,2
3	520 95 70-01	1		1,2
4	521 08 54-01	1		1,2
5	505 30 60-01	1		1,2
6	520 97 74-01	1		1,2
7	505 30 61-01	1		1,2
8	520 97 72-01	1		1,2
9	506 74 09-01	1		1
10	506 74 10-01	1		1
11	505 30 67-01	1		1
12	505 05 64-01	1		1
13	506 74 08-01	1		1
14	506 68 98-01	1		1
15	506 74 51-01	1		1
17	506 73 86-01	1		1
18	506 74 12-01	1		1
19	505 30 79-01	2		1
20	506 74 60-01	1		1
23	505 30 84-01	1		1
24	506 74 11-01	4		1
25	513 28 58-01	1		1
26	513 30 15-01	1		1
27	513 43 78-01	1		1
28	513 43 77-01	1		1
29	506 74 61-01	1		1
30	515 37 66-01	1		1

       
 
R 236R
ACCESSORIES

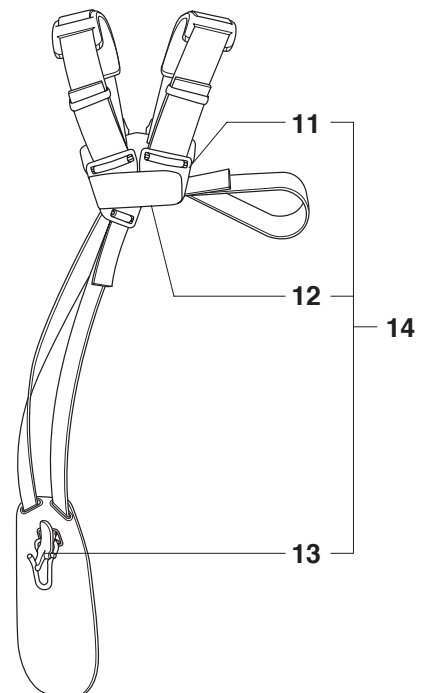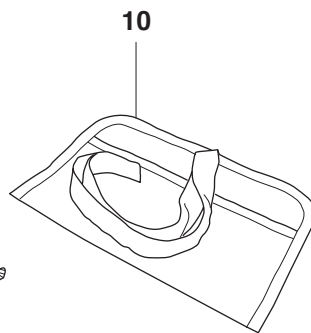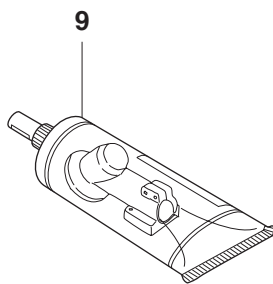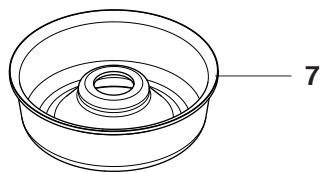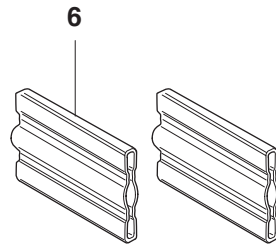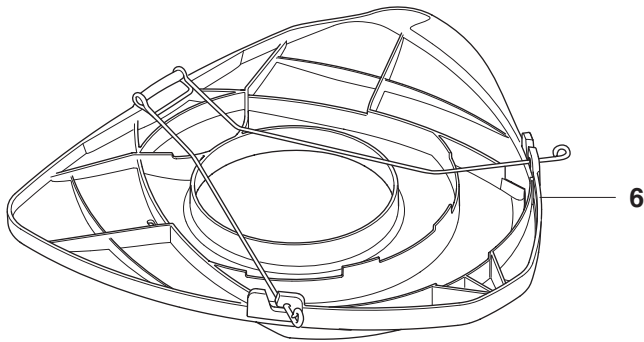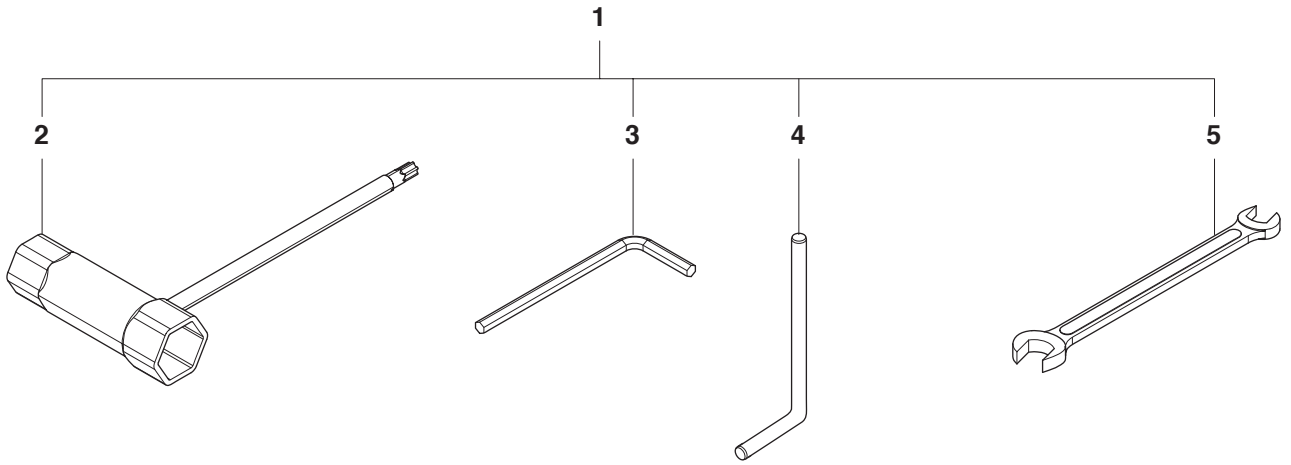

ACCESSORIES

Position	Article	Quantity	Notes	Kit
1	529 26 51-01	1		
2	529 26 55-01	1		1
3	505 31 19-01	1		1
4	505 31 20-01	1		1
5	506 61 50-01	1		1
6	544 35 91-01	1		
6	537 12 99-04	2	for South America	
7	528 81 81-01	1		
8	531 00 92-48	1		
9	503 97 64-01	1		
10	501 19 22-01	1		
11	503 73 40-01	1		14
12	503 73 41-02	1		14
13	502 02 28-02	1		14
14	537 21 63-01	1		
15	516 13 17-01	1		1
17	502 84 93-01	1		1
18	521 52 22-01	1		1
19	579 07 69-01	1		1
20	579 07 70-01	1		1
21	579 07 71-01	1		1
22	579 07 64-01	1		1

  1

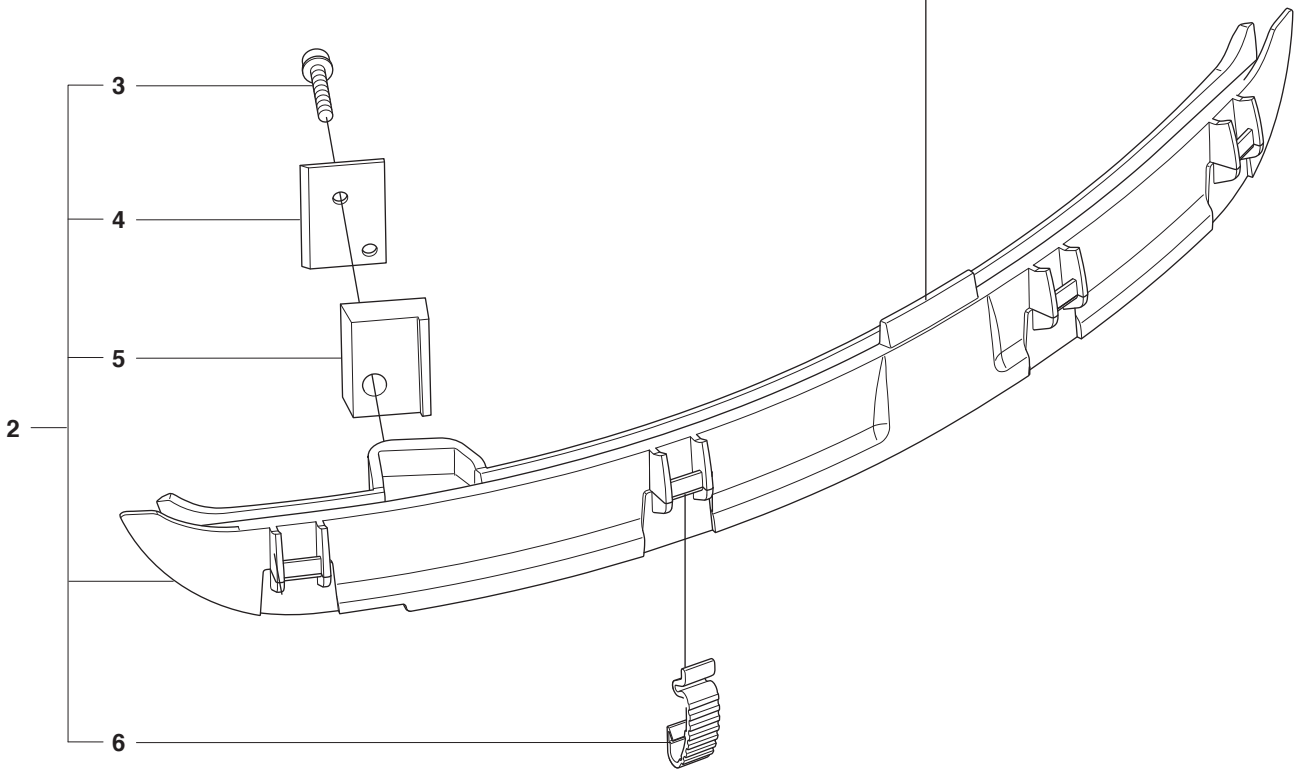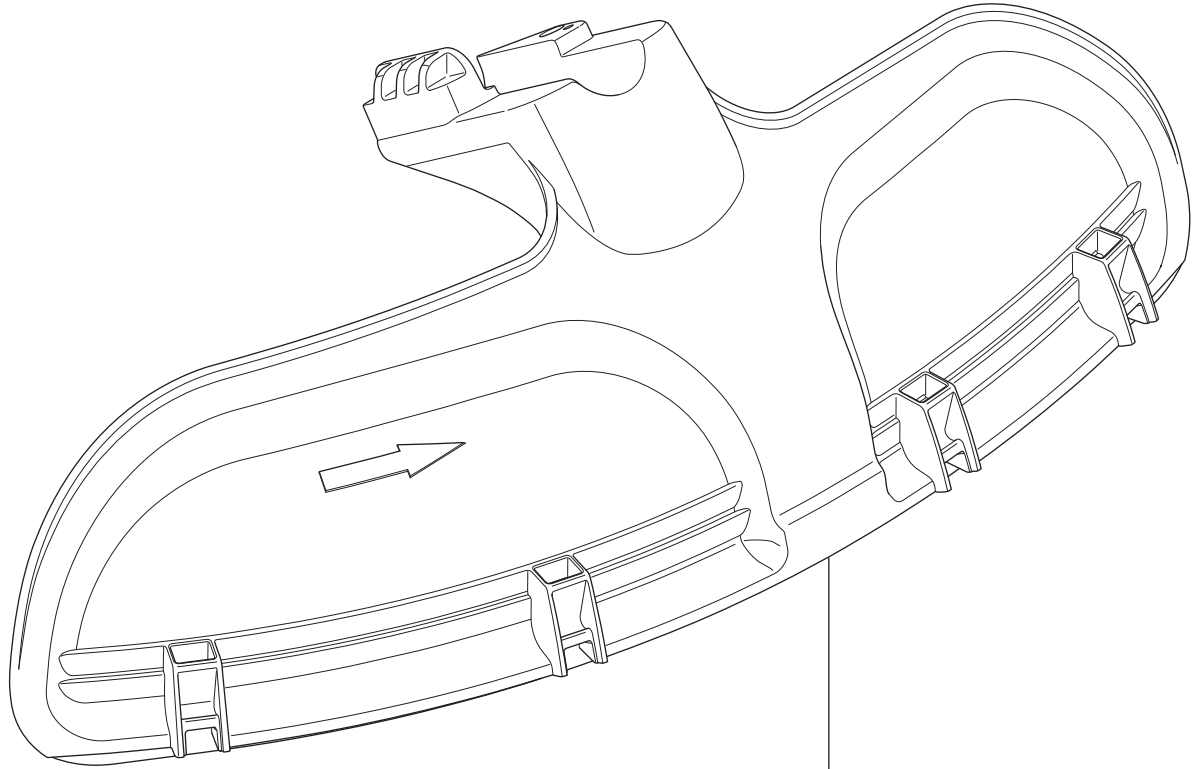

Position	Article	Quantity	Notes	Kit
1	537 33 16-03	1		
2	537 39 63-03	1		1
3	503 21 68-25	1		1,2
4	503 79 88-01	1		1,2
5	544 12 45-01	1		1,2
6	537 38 72-01	4		1,2